

Owners Manual



CAR USB/SD/MP3 PLAYER/ FM STEREO

1. Power Requirements DC=14.4V
2. Load Impedance: 4 OHM
3. Max. Power Output: 50W x 4CH
4. FM Frequency Range 87.5-108.0MHz
5. SD card have music into SD connect can to play
6. USB have music into USB connect can to play.



Basic Operation

1. **POWER** On/Off

Press Button To Turn On the unit, and press it again to turn off the unit.

2. **Mode**

Press Button To Select SD>USB>FM>AUX IN/BT

3. **MUTE**

Press button to turn On/Off the mute audio;

4. **CLOCK**

Press button to turn clock on/off and setting hour/minute

5. **EQ(Setting P-EQ)**

EQ to FLAT>class>POP>ROCK>Disp off

6. **Loud On/Off**

Press button to turn loud on/off

7. **Volume (set)Increasing/Decreasing**



Press **VOL+** or **VOL-** button to increase or decrease the volume level respectively 0--40;
BASS +/-, **treble** +/-, **balance** +/-, **fader** +/-, **loud on/off** EQ flat/class/pop/rock/disp off.

USB/SD Operation

1. **Pause/Play Button**

Press **||** button to play Mp3/suspend, Press it again to return to normal playback mode
2. **MP3 TRACK**

|| / **||** Continuously To Select a track ahead / downward.

Long hold 3 seconds to fast backward/ fast forward

4. **REPEAT(1/ALL REPEAT)**

Repeat: Press **1/ALL Repeat** if user wants to repeat the whole USB/SD or a specific track of the USB/SD

5. **INTRO**

Press Intro play 10seconds of track.

6. **RANDOM**

Press random on/off play of track.

7. **+10/-10**

subtract 10/add 10track.

8. **DISP**

For timing display

9. **DIR-CDR+**

For Next/Previous Directory

10. **Number buttons(1-6)**

During the playing mode, you can select any track directly by using (1-6) number buttons; for example, if you need the Sixteenth track, you can first press button +16 and then press button 6, the corresponding track 16 will be played.

FM Operation

1. **Band**

FM1 **FM2** **FM3**

2. **AMS**

(auto seek search tuning)
By pressing shortly, the radio searches for each preset station. When field strength level is holding, at than the threshold level of step level. The radio is holding at that preset number for 3sec. With releasing mute and then searches again.
By pressing longer than 1sec, and then 6 strongest stations are preset to the corresponding preset number. When an operation is finished, the radio executes the preset scan.

3. **Number Buttons(1-6)**

1-6 can help you store your favorite station by pressing any one of the number buttons. You can follow the steps as below:
Press and Hold Any **number button** until **<ch>** appears in the LCD display when receiving a station. And Now the Station already stored in the corresponding number button.

4. **Radio seek Down(||||)UP**

press button to select radio seek UP/DN. Series 1 sec to auto, stop 3 sec to manual.

5. **Bluetooth**

Press "Mode", "APS" or "4/BLU" buttons to hang up the phone.

Press "Band", "CLK" or "1/RPT" buttons to answer the phone

Press "Mode" button on the unit to change to BT mode, and open the bluetooth option in your mobile and choose "MP3 BT" for connecting to the unit.