


## Owner's Manual

EN

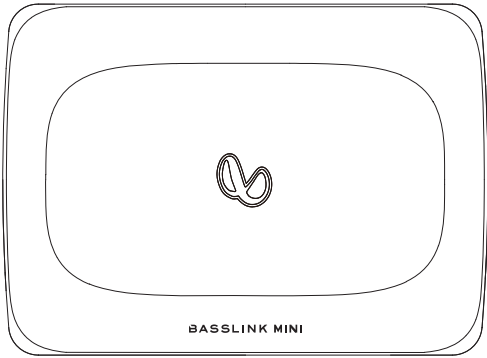



Harness high-level input wire guide	
White/White with black stripe	Left + / Left -
Gray/Gray with black stripe	Right + / Right -

**NOTE:** When connecting a factory or aftermarket stereo to the BassLink MINI's speaker-level inputs, set the **AUTO TURN ON** button to **ON**.

## SETTING GAIN, ADJUSTING PHASE, LOW-PASS FILTER, AND BASS BOOST

 
EN



### PHASE



### LOW PASS FILTER





### BASS BOOST



1. Start with **GAIN** control set to minimum, and the crossover control rotated midway.
2. Choose music with substantial bass content and turn the volume control on your receiver to  $\frac{3}{4}$  of its total output.
3. Adjust the **GAIN** control clockwise, listening carefully to the bass output. If you hear distortion, turn the **GAIN** control counterclockwise to decrease the **GAIN**.
4. Switch the **PHASE** back and forth to determine which setting provides the most clean bass output.
5. Adjust the **LOW-PASS FILTER** control until the BassLink MINI plays only low-frequency information – you should not hear elements such as vocals coming from the woofer.
6. Adjust the **BASS-BOOST** control clockwise or counterclockwise to suit your taste.

## CONNECTING THE REMOTE BASS CONTROL MODULE

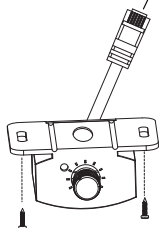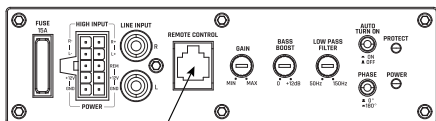

## SPECIFICATIONS

- Driver Complement: 6" x 8" (152mm x 203mm) woofer
- Amplifier Power Output: 100WRMS, 200W Max
- Frequency Response: 30 Hz – 150 Hz
- Fuse: 15A
- Maximum Current Draw: 13A
- Quiescent Current Draw: <600 mA
- Input Sensitivity: 0.1 V – 4.0 V low-level input; 0.25 V – 10V high-level input
- Crossover Frequency: 50 Hz – 150 Hz
- Crossover Slope: 12 dB/octave
- Bass Boost: 0 dB to +12 dB @ 50Hz
- Dimensions: 11-7/16" x 8-5/16" x 3" (289.6mm x 209.6mm x 75mm)
- Weight: 8.22lbs. (3.73kg)

## TROUBLESHOOTING

### No audio and POWER indicator is off:

- No voltage at **BATT+** and/or **REM** terminals, or bad or no ground connection. Check voltages at amplifier terminals with **VOM**.

### No audio and PROTECT indicator flashes every 4 seconds:

- DC voltage on amplifier output. Amplifier may need service; see enclosed warranty card for service information.

### No audio and PROTECT and POWER indicators flash:

- Voltage less than 9V on **BATT+** connection. Check vehicle charging system.

### No audio and PROTECT indicator is on.

- Amplifier is overheated. Make sure amplifier cooling is not blocked at mounting location. Or, there may be voltage greater than 16V (or less than 8.5V) on **BATT+** connection. Check vehicle charging system.

### Amplifier fuse keeps blowing.

- The wiring is connected incorrectly or there is a short circuit. Check wiring connections.

### Distorted audio.

- **GAIN** is not set properly. Check setting. Check wires for shorts or grounds. Amplifier or source unit may be defective.

### Music lacks dynamics or "punch."

- If using speaker-level inputs, check connections for proper polarity. Switch **PHASE** back and forth between 0° and 180° and leave on setting with best sound.

### Engine noise—whining or clicking—in system when the engine is on.

- Amplifier is picking up alternator noise. First, check ground connection on the amplifier – a loose or improper ground is one of the main causes for noise. Turn down **GAIN**. Move RCA audio cables away from power wires. Installing an alternator noise filter on power line between battery and alternator might also be necessary.



HARMAN International Industries,  
Incorporated 8500 Balboa Boulevard,  
Northridge, CA 91329 USA  
www.infinityspeakers.com

© 2019 HARMAN International Industries, Incorporated. All rights reserved. Infinity is a trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries. Features, specifications and appearance are subject to change without notice.