

Operating instructions

Battery-powered Camping Lamp

64194

toboli



Illustration similar, may vary depending on model

Please read and follow the operating instructions and safety information prior to initial operation.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler – Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler – Germany

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15



Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it.

Keep these operation instructions in a safe place.

Safety instructions and general notes


- Before the first use, check the lamp.
- Insert suitable batteries in the correct direction.
- The device has the IP code IPX4 (splash-proof). This means that it cannot be submerged into water without damage.
- The lamp must not be retrofitted during the warranty time.
- The lamp has no memory function.

Warning! Do not use rechargeable D-size batteries to power the lamp.

Technical specifications


LED power (W)	10
Brightness (lm)	1000
Colour temperature (K)	3000 / 6000
Number of LEDs	46
Lighting mode	Daylight white, warm white, combined, flash light
Discharging time (h)	25 ("warm white" mode) / 18 ("daylight white" mode) / 12 (combined)
IP code	IPX4
Batteries required	Three 1.5-V batteries, D size (not included)
Operating temperature (°C)	-25-40

Names of components and dimensions

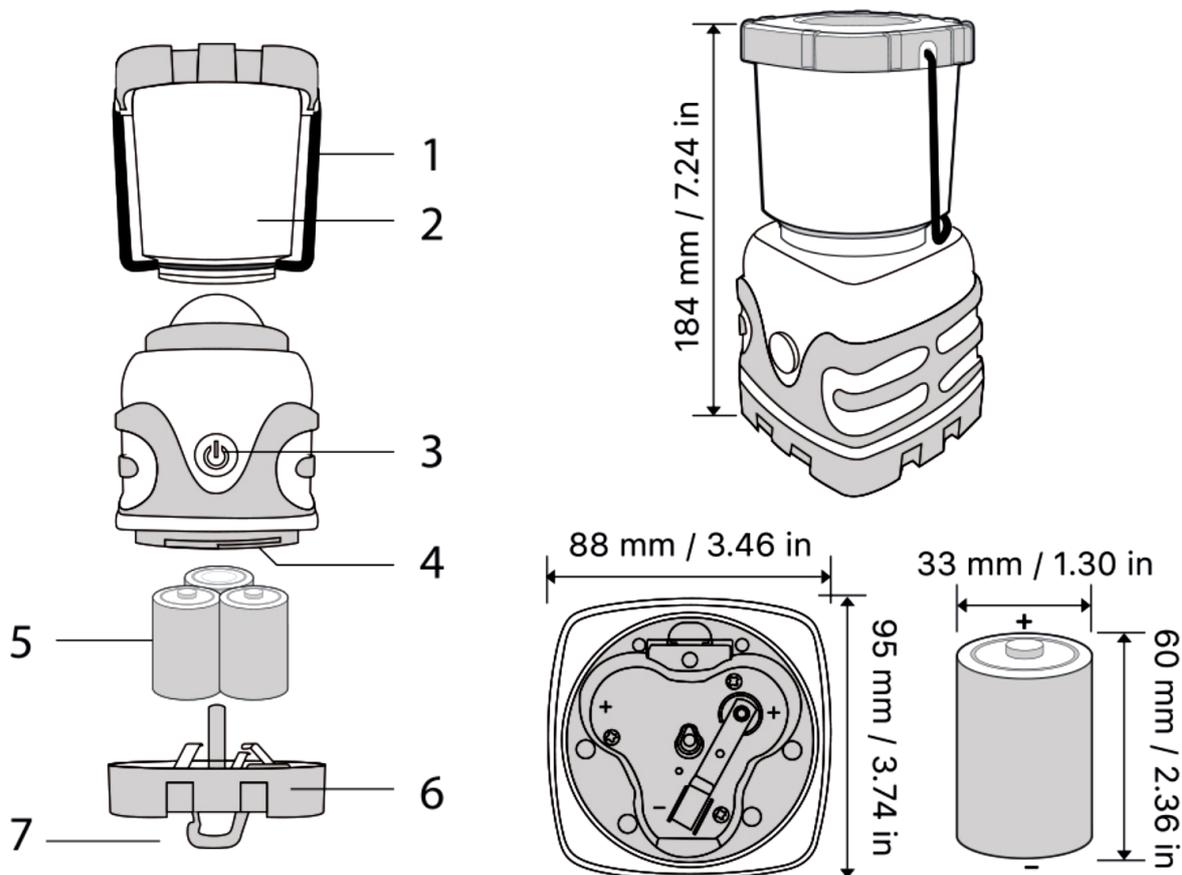


No	Name
1	Handle
2	Light diffusor
3	Switch
4	Battery box
5	1.5-V batteries, D size (not included)
6	Base
7	Hook

Inserting the batteries

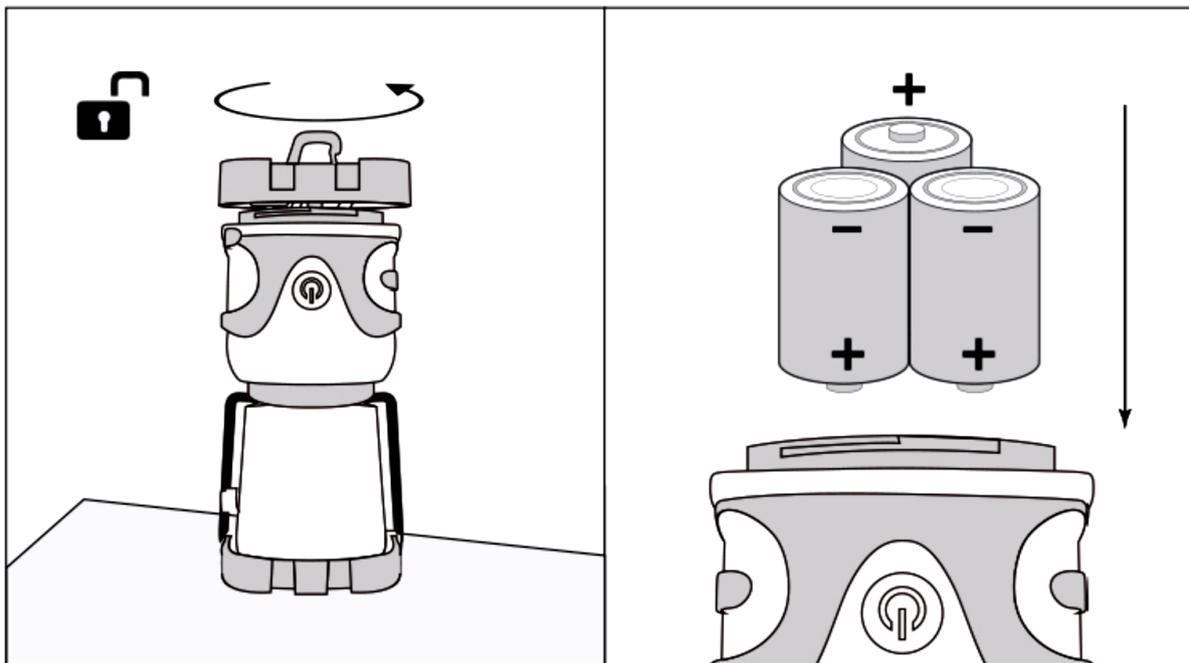


1. Turn the lamp upside down and unlock the base by turning it. 2. Insert the batteries in the correct direction. **Caution:** Do not use rechargeable batteries!

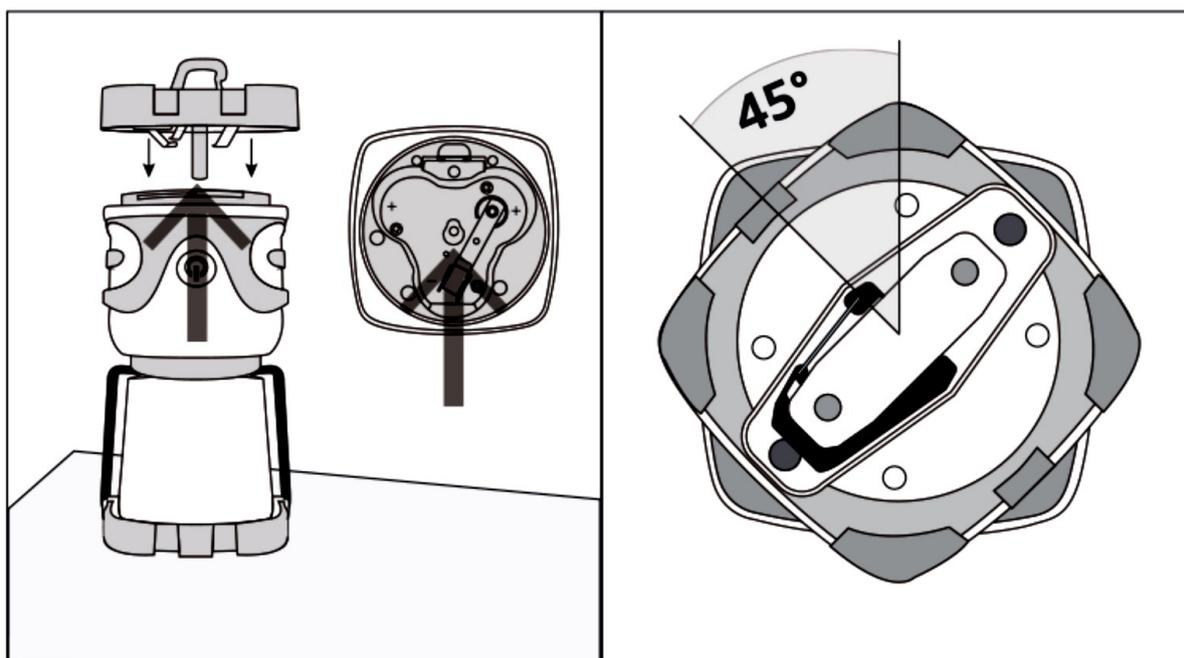


3. Replace the base while making sure that the pin is at the correct position (see arrow). 4. Re-lock the base by turning it.

Operating the lamp without light diffusor

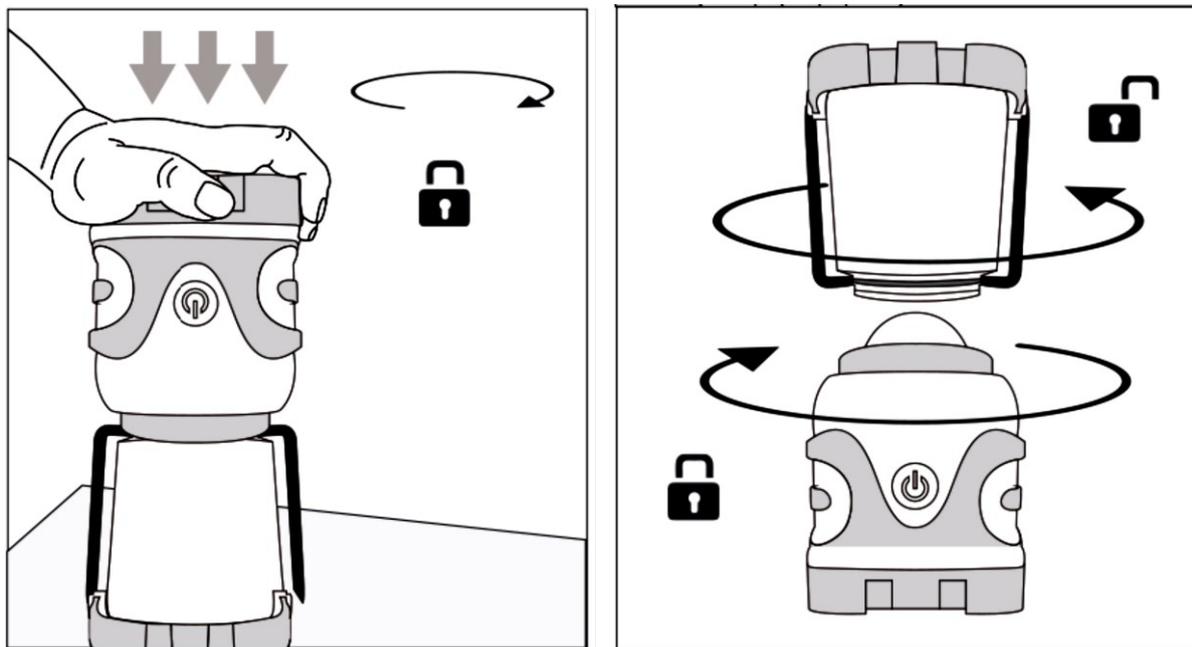


1. Turn the lamp upside down and push it down as shown.
2. Unlock the lock between the lamp and diffuser (see direction of arrows). For later re-locking, turn in the opposite direction.

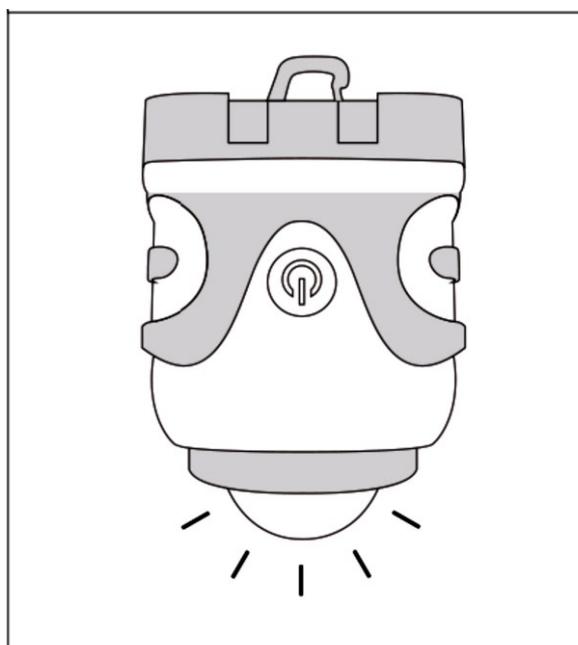


3. The lamp is lit without light diffusor.

Using the switch

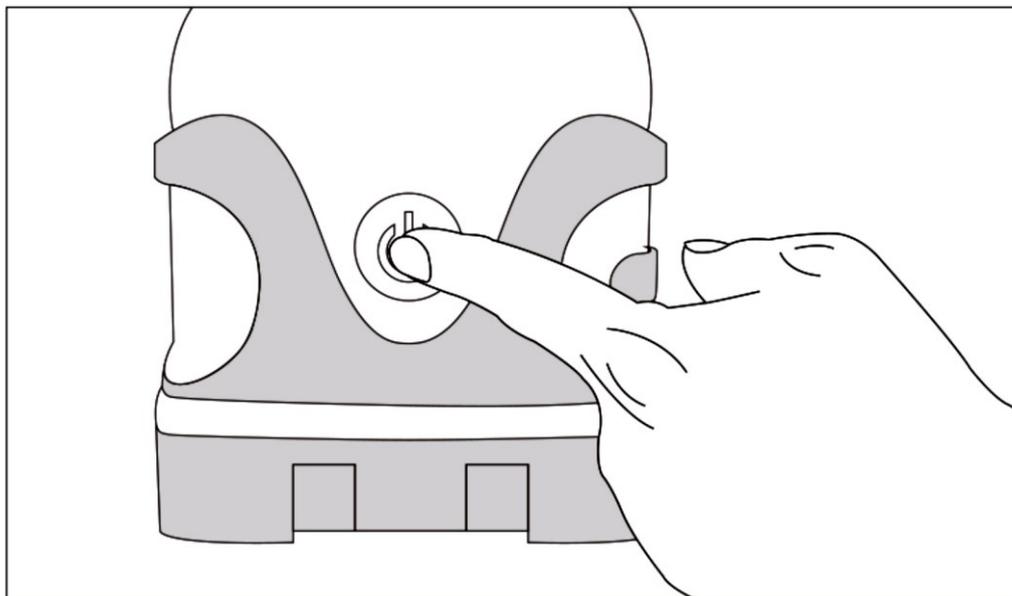

Switching on and off

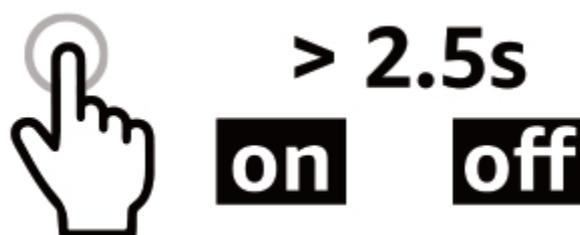

Swapping between the modes



Step	Explanation	Step	Explanation	Step	Explanation
1	Daylight white	3	Combined	5	Off
2	Warm white	4	Flash light		

Maintenance

1. When the lamp will not be used during a prolonged period, take out the batteries; thus, you avoid consequential damages from the batteries leaking.
2. For cleaning, do not use chemical dissolvers.
3. For improved lighting results, regularly wipe off the lamp.

Regulations for waste disposal

The Waste Electrical and Electronic Equipment Directive (WEEE Directive, 2012/19/EU) of the EU was implemented in the German law related to electrical and electronic equipment and appliances.

All WilTec electric devices that fall under the WEEE directive are labelled with the symbol of a crossed-out wheeled rubbish bin. This symbol indicates that this electric device must not be disposed of with the domestic waste.

WilTec Technik GmbH is registered with the German registration authority EAR (Stiftung Elektro-Altgeräte Register) under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic devices (intended for use in the countries of the European Union and other European countries with a separate waste collection system for these devices).

The symbol on the packaging or the product itself indicates that this product must not be treated as normal domestic waste but must be disposed of at a recycling collection station for electrical and electronic waste.

By disposing of this product correctly, you contribute to the protection of the environment and the health of your fellow people. Inappropriate disposal threatens the environment and health.



Material recycling helps to reduce the consumption of raw materials.

Additional information about the recycling of this product can be provided by your local commune, the municipal waste disposal facilities, or the store where you purchased the product.

Address:
WilTec Wildanger Technik GmbH
Königsbenden 12 / 28
52249 Eschweiler Germany

Important note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.