
# **VEJLEDNING**

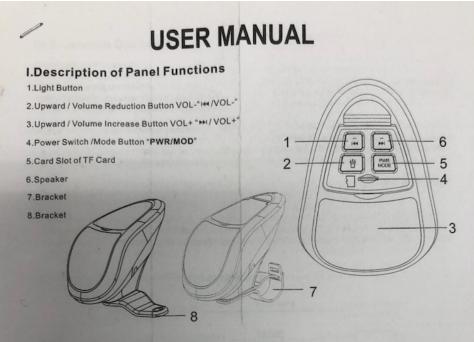

## II. Functions and Operation

- 1. Light Button: short press to switch
- 2. Upward / Volume Reduction Button VOL-" I≪ /VOL-"
- 1) In the radio receiving status, short press " 🔫 " button to reduce volume and long press
- " 🔫 " button to search the low-end frequency station.
- 2) In the BT/U disk playing status, short press "in" button to reduce volume and long press
- " Is " button to select the previous song.
- 3. Upward / Volume Increase Button VOL+ " → I / VOL+"
- 1)In the radio receiving status, short press " >> 1 " button to increase volume and long press
- " ▶ " button to search the high-end frequency station.
- 2)In the BT/U disk playing status, short press "→" button to increase volume and long press "→" button to select the previous song.
- 4. Power Switch / Mode Conversion Button "PWR/MOD"
- 1)After power up, short press the "PWR/MOD" button to turn it on; long press the "PWR/MOD" button to turn it off; in the power-on status, short press "PWR/MOD" to converse modes.

 
2)In the power-on and radio receiving status, short press "PWR/MOD" button to converse modes in "Radio Receiving-U disk-BT-AUH" loop. When the related device is not connected to the host, the mode of the default device is not in the loop. In the Bluetooth and BT/U disk playing status, short press the corresponding button to pause, short press again to release pause, and double press to converse modes in "Radio Receiving-U disk-BT-AUH" loop. When the related device is not connected to the host, the mode of the default device is not in the loop.

#### III.Bluetooth Operation:

Bluetooth pairing method:

- 1)After power up, short press "PWR/MOD" button to enter Bluetooth mode
- 2)After entering the Bluetooth mode, the host will give out a "tinkling" prompt tone; you turn on the Bluetooth on your phone, and then use your phone to search for the local device (name: MT493) and make a paired connection
- 3)The default initial pairing password is "0000". After the pairing is successful, the host will give out a "tinkling" prompt tone; at this time, you activate your music player to play music by the means of Bluetooth. Note: the pairing password is not necessary for some of mobile phones which automatically connect with the Bluetooth when the host is searched.
- 4)When the mobile phone disconnects the Bluetooth device, the host will give out a "tinkling" prompt tone.
- 5)After the local device is turned on, you insert the USB flash disk in the Bluetooth playing status or short press the MOD button to switch to each mode; meanwhile, the Bluetooth device will automatically exit; when the Bluetooth device is disconnected, the host will give out a "tinkling" prompt tone.

## IV.Functional Wiring Diagram of Host:



### V. Installation diagram:



### VI. Technical Parameters:

- 1. connection distance of the Bluetooth ≥10M
- 2. Audio frequency response: 100HZ-18KHZ
  3. Audio distortion ≤0.32%
  4. Audio signal to noise ratio ≥ 45dB
  5. Audio output power ≥7W×2

- 6. Dustproof and waterproof grade: IP65