


Monteringsanvisning / Fitting instruction

Artikel / Article 019-H5

Volvo S40/V40 Turbo((Fas I / Phase I)

Läs även "Allmän monteringsanvisning"
Also read "General fitting instruction"

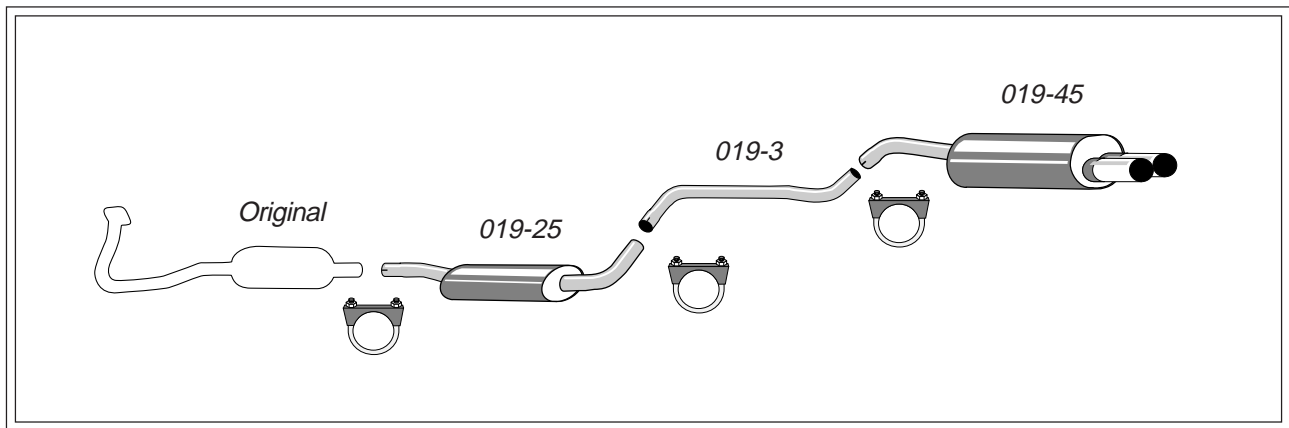

Avgassystemet skall monteras i bilens original upphängningar på samma vis som originalsystemet. Nya klammer och skruvar medföljer i monteringssetsen.

This exhaust shall be fitted in the original hangers in the same way as the original exhaust. New clamps and bolts are supplied.



180228