


MONTERINGSANVISNING 036-H5R

Komplett kit passar efter katalysator Complete kit fits to catalyst

BMW 325i/328i E36 Sedan/Saloon Coupé Cabrio Touring 12/90-97

Ändrör/tailpipes: 2x80 mm

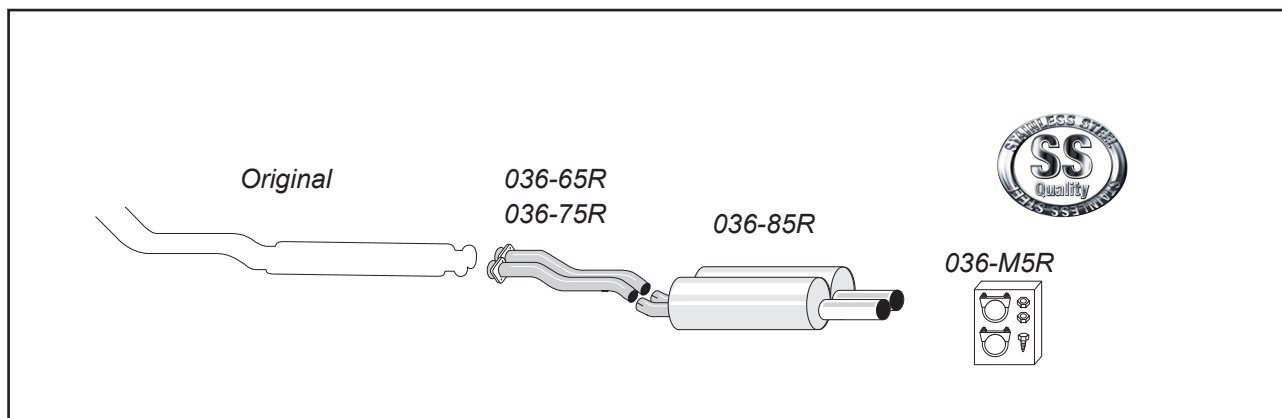

Häng upp bakre dämparen i bilens original gummi-upphängningar.

Skruva loss upphängningarna från bilen och fäst dem i ljuddämparen med skruvar, muttrar och brickor från monteringssetsen. Montera inloppsrören i ljuddämparen och fäst både upphängningarna och dämparen vid bilens bottenplatta. Justera ljuddämparen innan inloppsrören kläms fast. Dra fast inloppsrören vid katalysatorflänsen med de nya skruvarna som medföljer.

Kontrollera att upphängningarna är på rätt plats, annars flytta dem. Följ instruktioner i generella monteringsanvisningen.

Lycka till!

Mount the rear silencer using the car's original rubber hangers.

Unscrew the hangers, attach them to the silencer using the screws, nuts, and washers from the installation kit. Install the inlet pipe into the silencer. Secure the rubber hangers and silencer to the car's underbody. Adjust the silencer position before clamping the inlet pipe. Fasten the inlet pipe to the catalytic converter flange using the included screws.

Note: Hangers may be misaligned and might need adjustment. Refer to our general installation guide

Good luck!



250325