


1. Connect the plastic part (1) to the pipe support facing upwards with the oblong part. Attach it with the 8 mm screws provided and insert the element on the transverse axis (2), with the wheels facing backwards. Then screw the two parts of the trolley together (3).
2. Fold the elements of the handle together and secure them with the set with 2 screws 6 mm. Then attach the handle to the axle transverse (4).
3. Insert the aluminum tubes of the rim holder one into the other and place them in the plastic cover and insert the tube narrow side into the handle on the trolley.
4. Then install the spindle and starting from the bottom: place a plastic disc (5+6) and put a tire on it. Repeat this step until all 4 tires are on the rim stand.

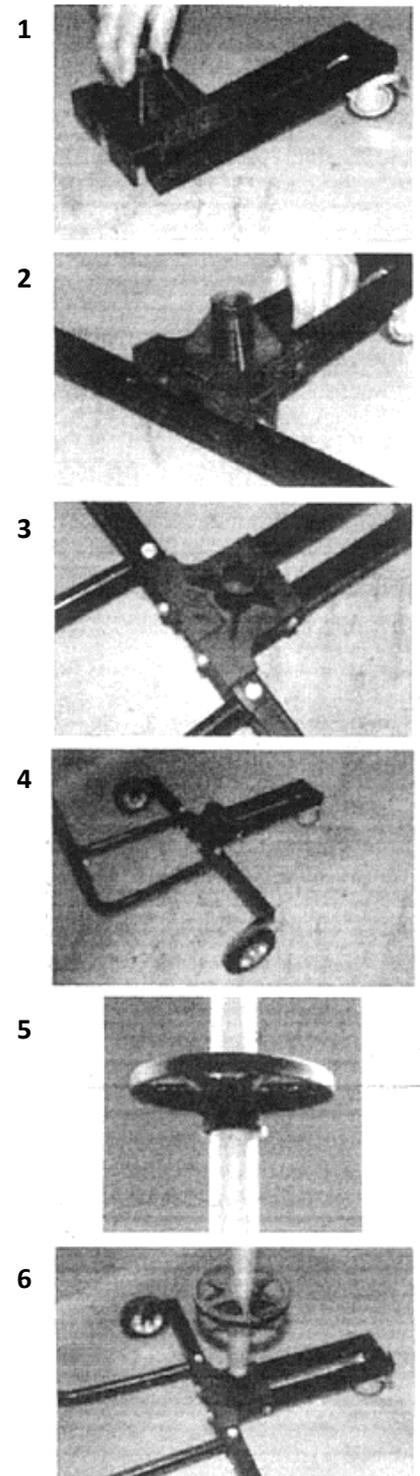


Fully assembled

Parking brake



Wheel stand parts

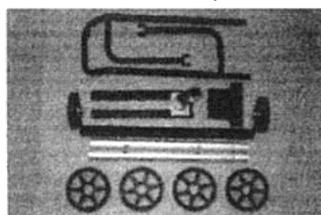

Assembly parts

