


Installation Manual

AUDI A3 5DR
AU-A3-5-A-18



COMPONENTS INCLUDED

SHADES

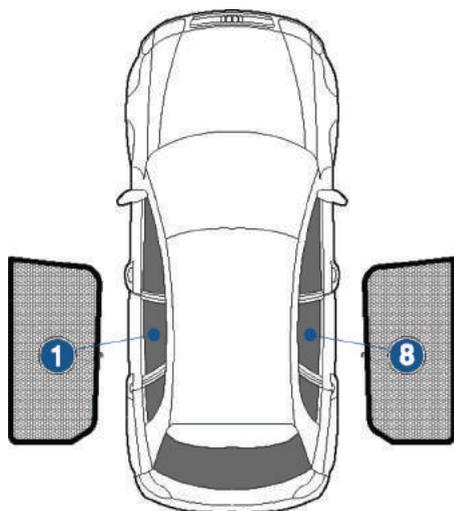

1+8

FIXING CLIPS



CL-P03 x 2



CL-W01 x 1



CL-A01 x 1

CAR[®]
SHADES

Side Shade Installation

AUDI A3 5DR
AU-A3-5-A-18

COMPONENTS NEEDED:



1+8



CL-P03 x 2

STEP #1

CLEAN THE AREA WHERE CLIPS ARE TO BE MOUNTED (AS IN STEP 2) WITH THE SURFACE CLEANER AND ADHESION PROMOTER SACHET PROVIDED



STEP #2

PRESS THE CLIPS FIRMLY INTO PLACE AND ALLOW TO DRY FOR 20 MINUTES



STEP #3

POSITION THE SIDE SHADES




STEP #4

ATTACH THE SHADES TO THE CLIPS



STEP #5

ENSURE SECURELY FITTED IN PLACE

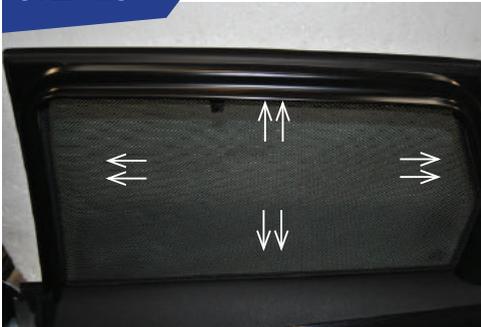

CAR
SHADES