

Installation Manual

AUDI Q7 5DR
AU-Q7-5-B-18



COMPONENTS INCLUDED



FIXING CLIPS



CL-M13 x 4



Side Shade Installation


AUDI Q7 5DR
AU-Q7-5-B-18

COMPONENTS NEEDED:



STEP #1

ATTACH CLIPS ON SHADE EDGES

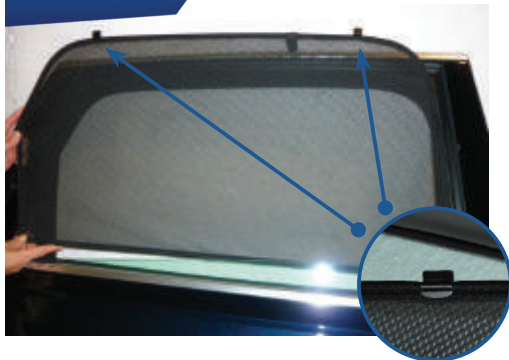



STEP #2

POSITION THE SIDE SHADE




STEP #3

INSERT CLIPS INSIDE WEATHERSTRIP

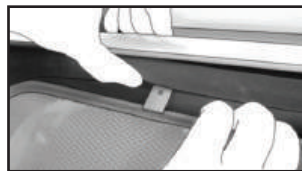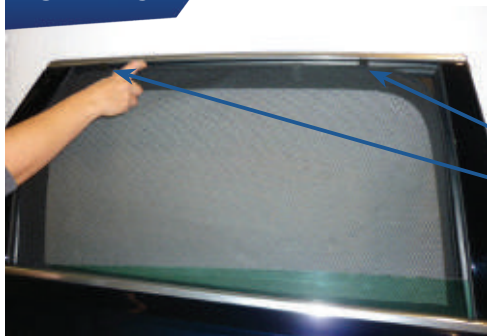

STEP #4

ENSURE SECURELY FITTED IN PLACE

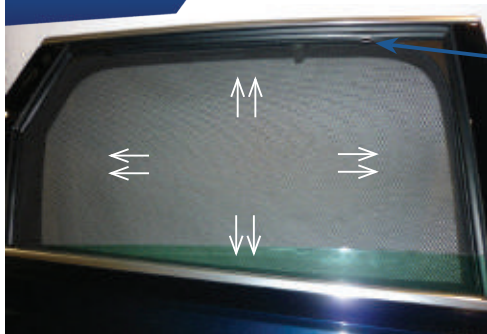

CAR
SHADES