



PRIVACY SHADES

BMW 3 Series Estate 2013

BMW-3SER-E-C

Installation Instructions




**Privacy Shades
Unit 1 Queens Court
Fletcher Way
Mansfield
Nottinghamshire
United Kingdom
NG19 0FN**

**+44 (0)1623 428 882
info@car-shades.com**

INSTALLATION INSTRUCTIONS





BMW 3 SERIES ESTATE 2013

BMW-3SER-E-C

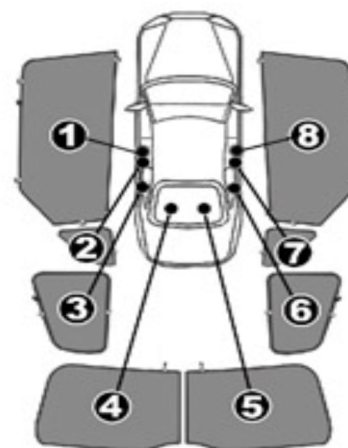

COMPONENTS INCLUDED

SHADES

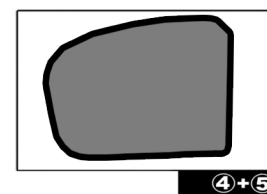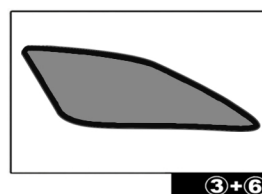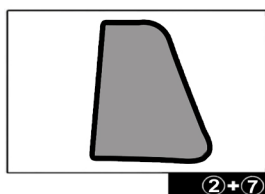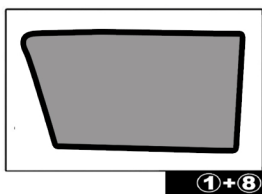


FIXING CLIPS




CL-MO2 x2



CL-M04 x8





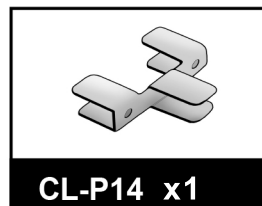


CL-P14 x1








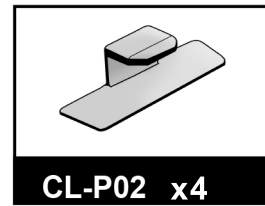


CL-P02 x4



SIDE SHADE INSTALLATION

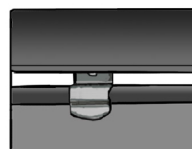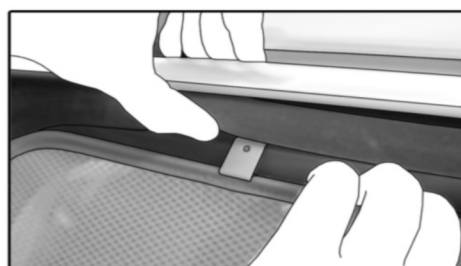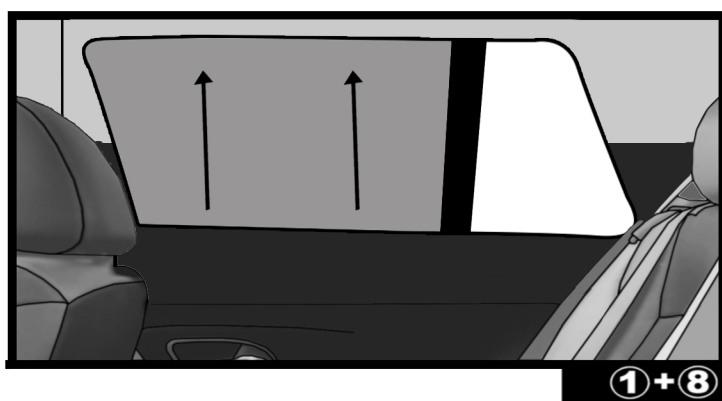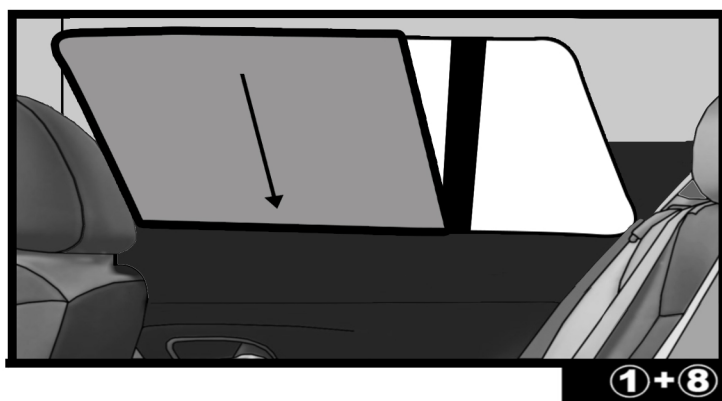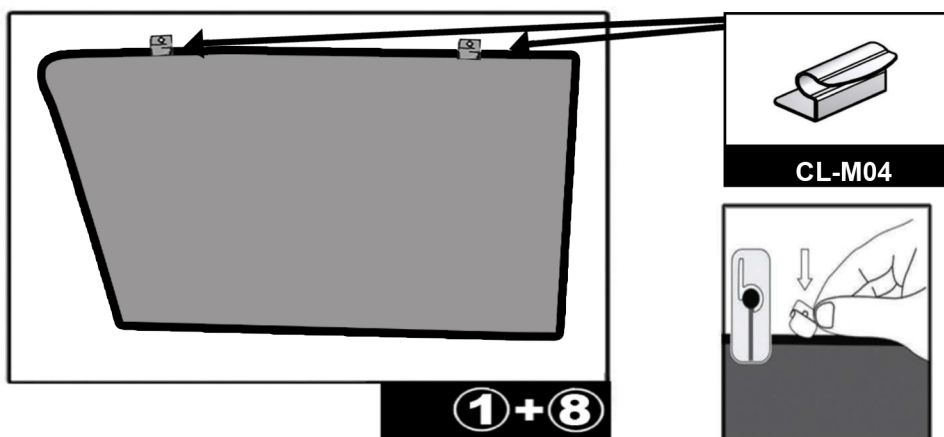


SIDE SHADE INSTALLATION

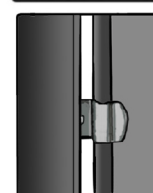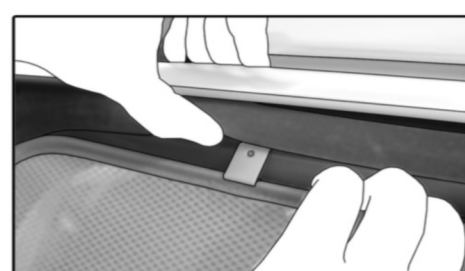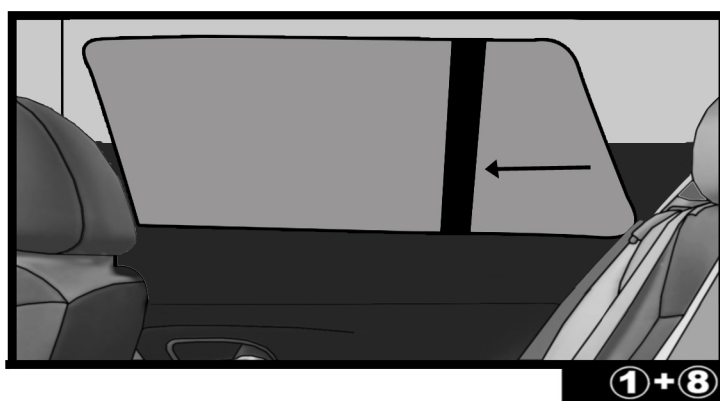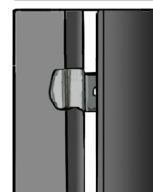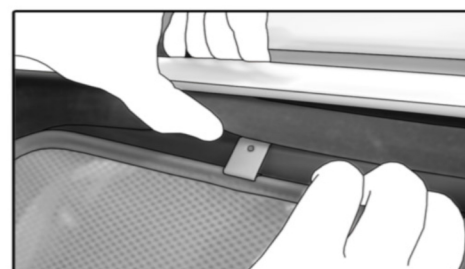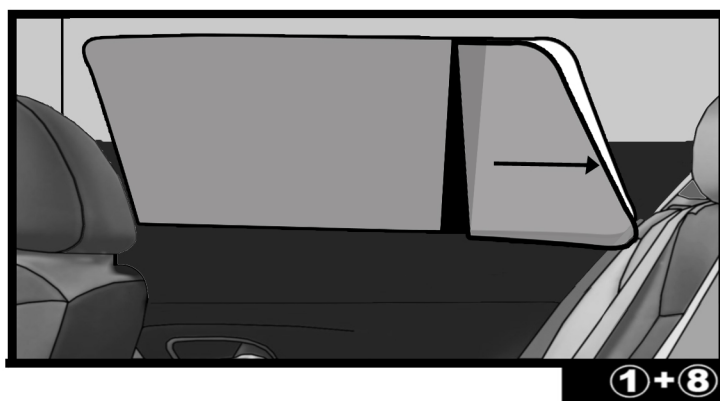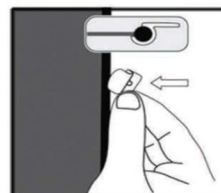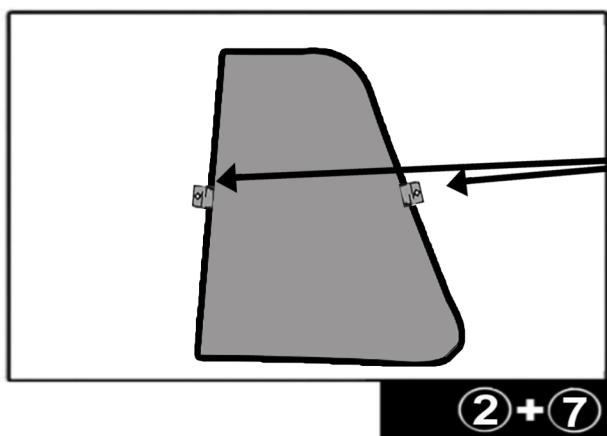


QUARTER LIGHT SHADE INSTALLATION

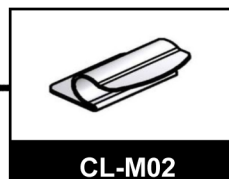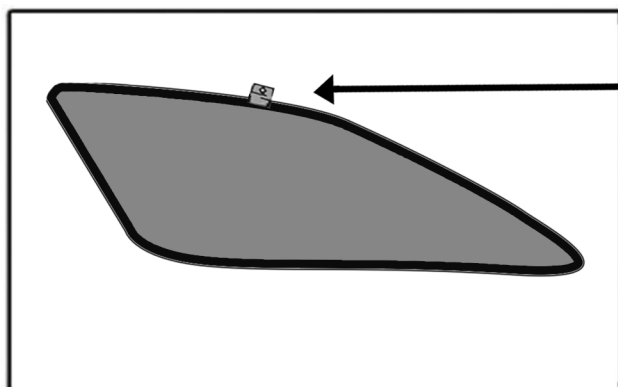


CL-M02

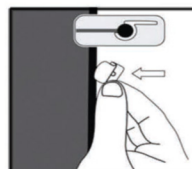



③+⑥

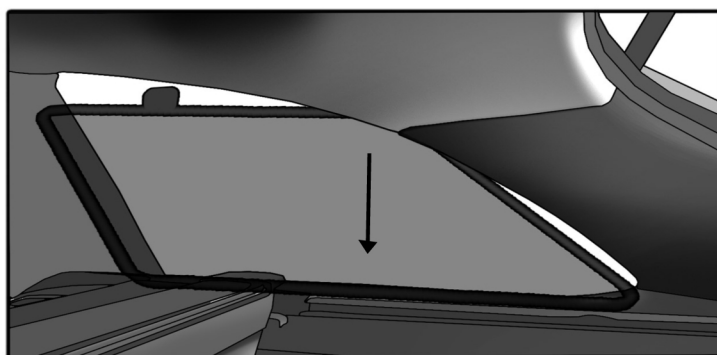



③+⑥

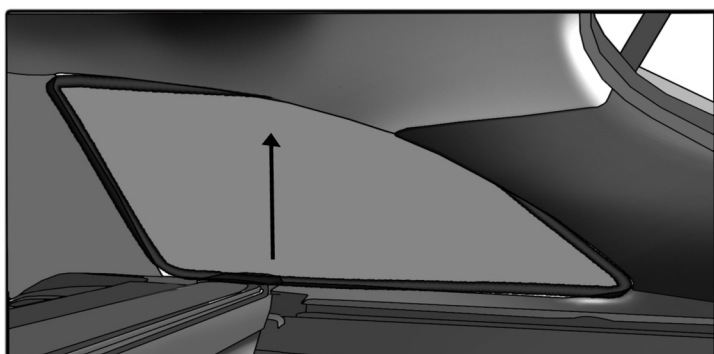




③+⑥

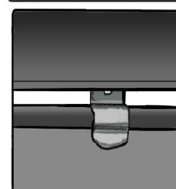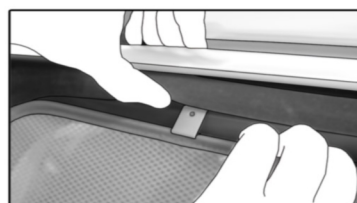

REAR SHADE INSTALLATION

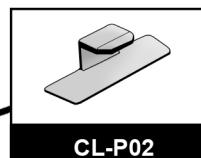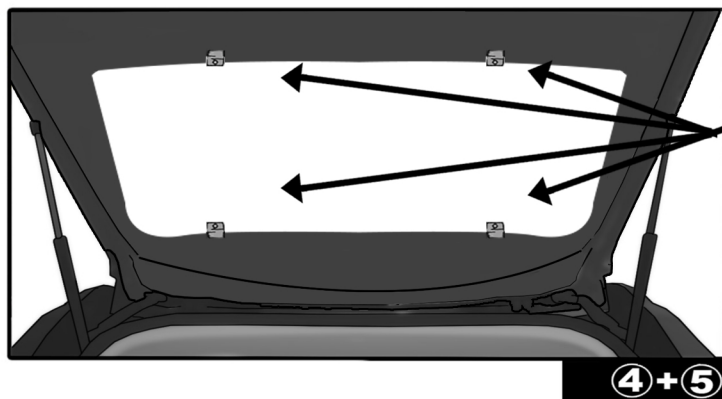

CL-P02
Use Adhesion Promotor

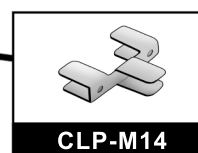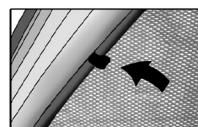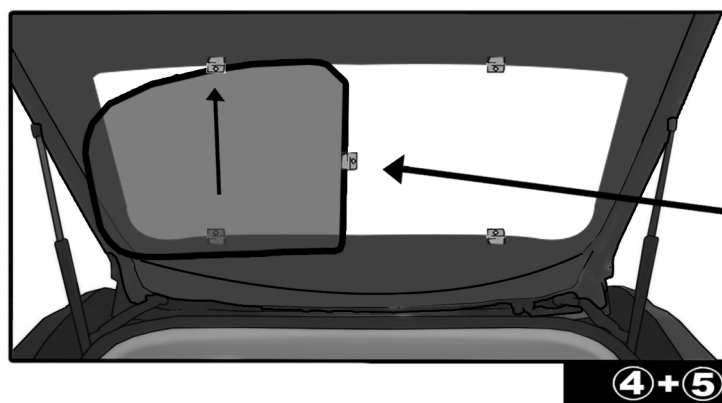

CLP-M14

