

Installation Manual

BMW X4 5DR
BMW-X4-5-A-18



COMPONENTS INCLUDED



FIXING CLIPS



CL-M04 x 6



CL-M13 x 4




Side Shade (A) Installation

BMW X4 5DR

BMW-X4-5-A-18

COMPONENTS NEEDED:

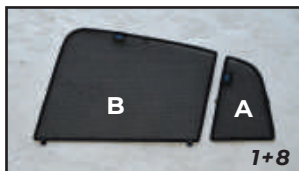

STEP #1

ATTACH CLIPS ON SHADE EDGES



STEP #2

POSITION THE SIDE SHADE




STEP #3

INSERT CLIPS BEHIND INTERIOR TRIM



STEP #4


ENSURE SECURELY FITTED IN PLACE

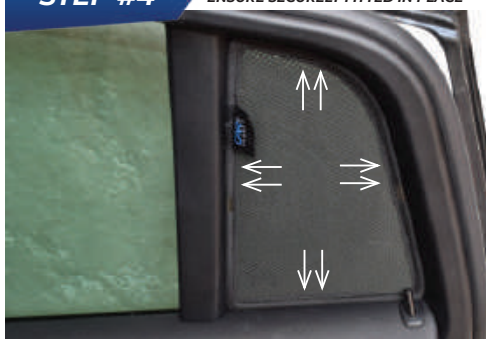

Side Shade (B) Installation

BMW X4 5DR
BMW-X4-5-A-18

COMPONENTS NEEDED:

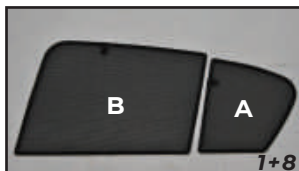


CL-M04 x 2



CL-M13 x 4


STEP #1

ATTACH CLIPS ON SHADE EDGES

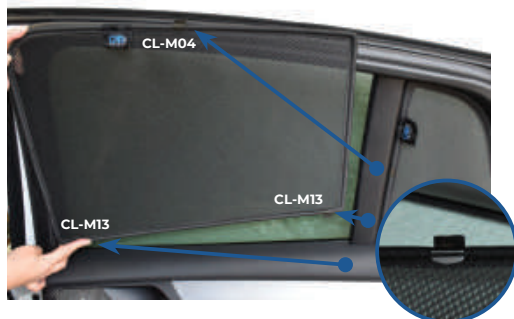

STEP #2

POSITION THE SIDE SHADE

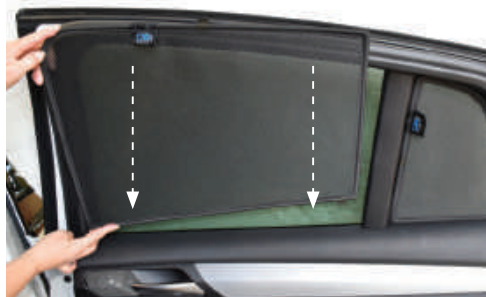


STEP #3

INSERT CLIPS BEHIND INTERIOR TRIM



STEP #4

ENSURE SECURELY FITTED IN PLACE

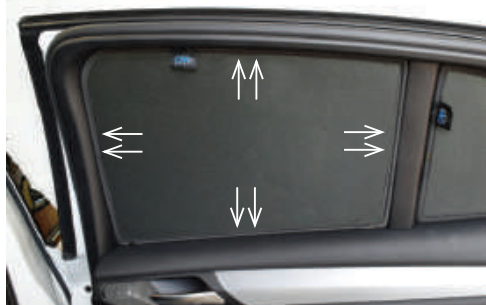

CAR
SHADES