


N50430


ZAWA

PREMIUM CYCLE CARRIER


- ⓘ Baule posteriore per portabici da gancio traino.
- EN Rear box for towbar bike racks.
- F Coffre arrière pour porte-vélos sur boule attelage
- E Baúl trasero para portabicicletas con gancho de remolque.
- D Heckkoffer für Abschlepphaken-Fahrradträger.
- NL Trekhaak koffers
- P Mala traseira para suportes de bicicletas com gancho de reboque.
- H Hátsó csomagtartó a vonóhoroghoz.
- RO Portbagaj spată pentru cârlig de remorcare.
- CZ Zadní box pro nosiče kol na tažné zařízení
- SK Zadný box pre nosiče bicyklov na ťažné zariadenie
- PL Box na hak
- GR Μπαγκαζιέρες Αυτοκινήτου
- S Lasthållare för dragkrok
- FIN Vetokoukkuun kiinnitettävät kuljetuslaatikot
- EST Haakekonsule paigaldatavad pagasiboksid
- LAT Tagumine pagasiruum haakeriistaga rattahoidjate jaoks.
- LT Galinė vilkties dviračių bagažinės dėžė

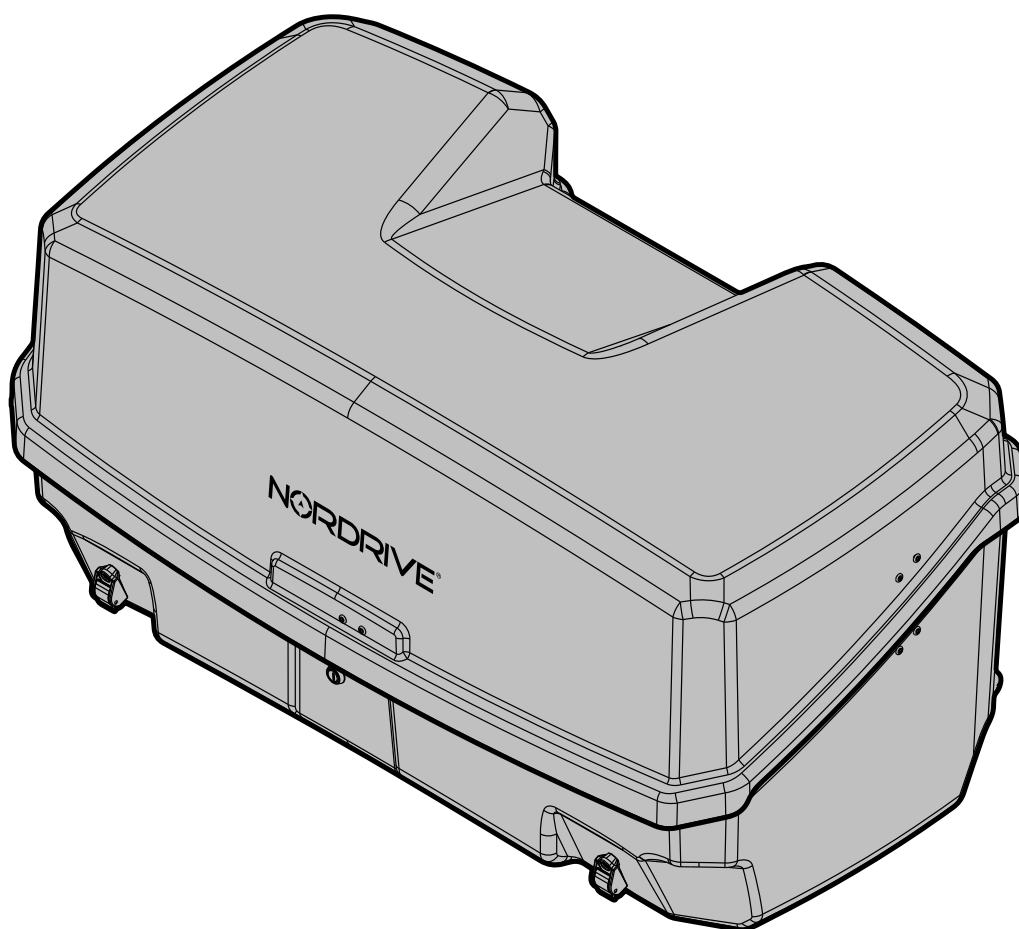


✓ WAVE 3

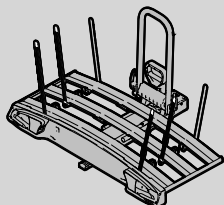






✓ WAVE 4

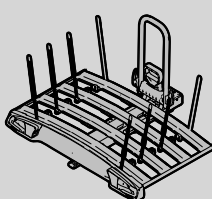

NORDRIVE
TRANSPORT SOLUTIONS


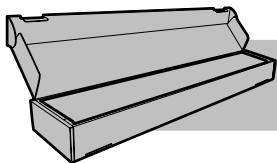


Contenuto • Content • Contenu • Inhalt • Contenido

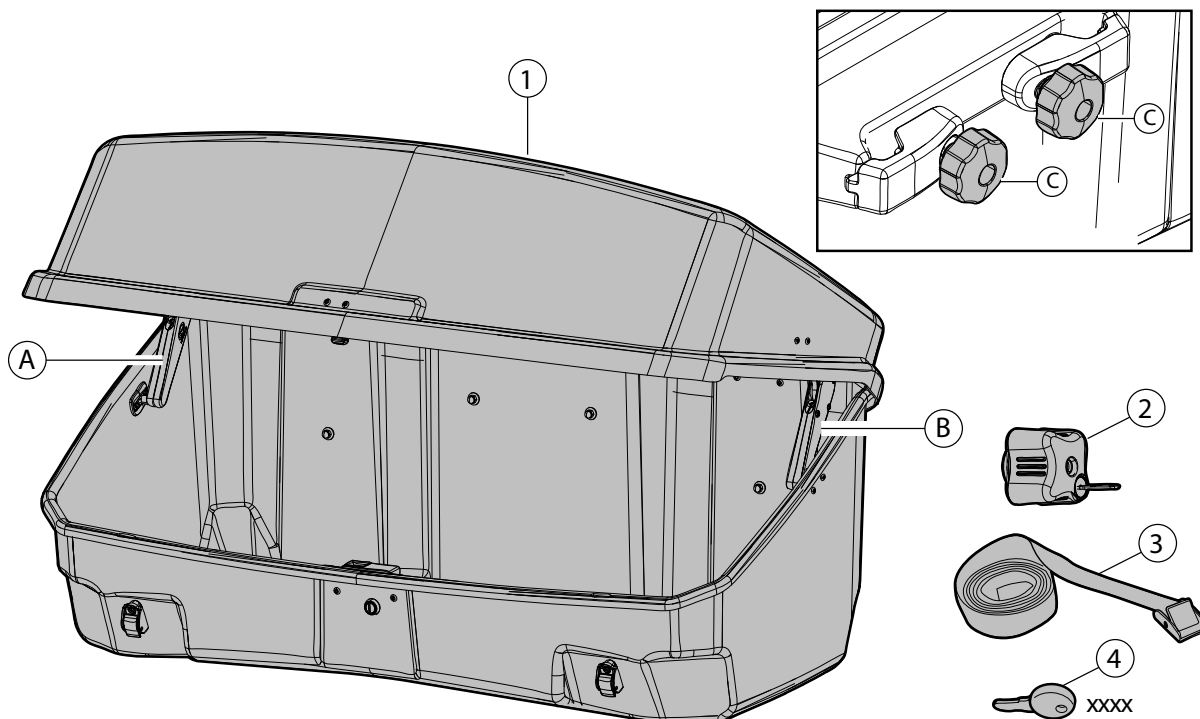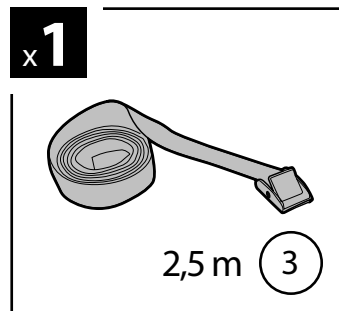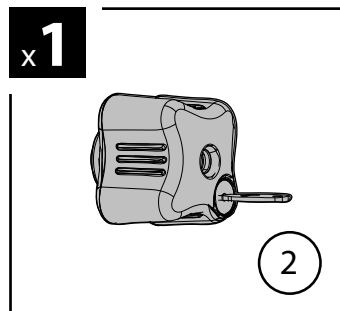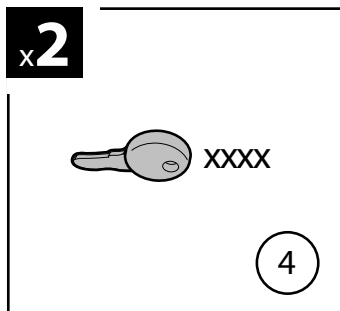
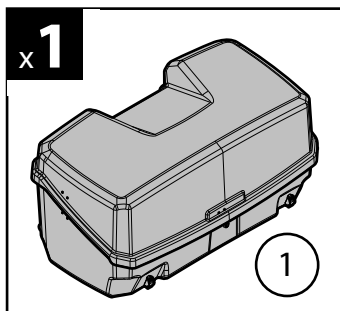


Montaggio • Fitting instructions • Montage • Montageanleitung • Montaje



1

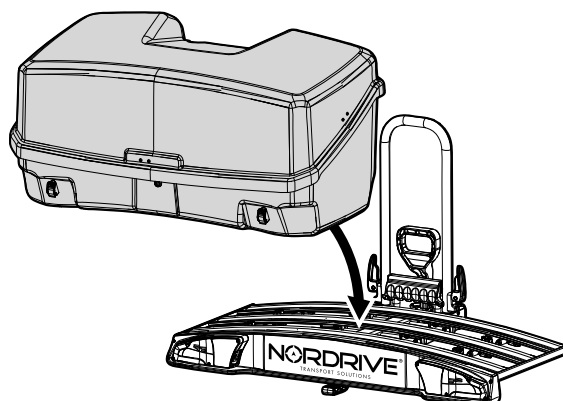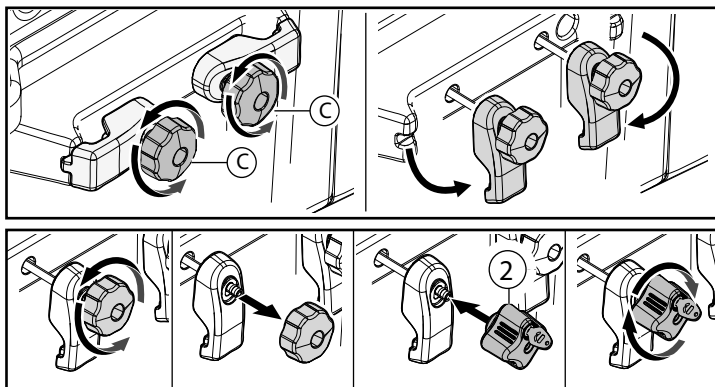



2

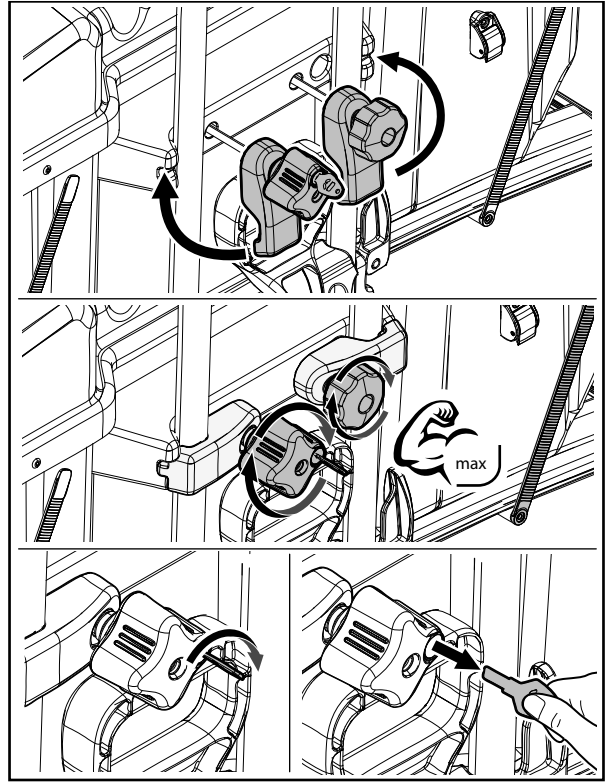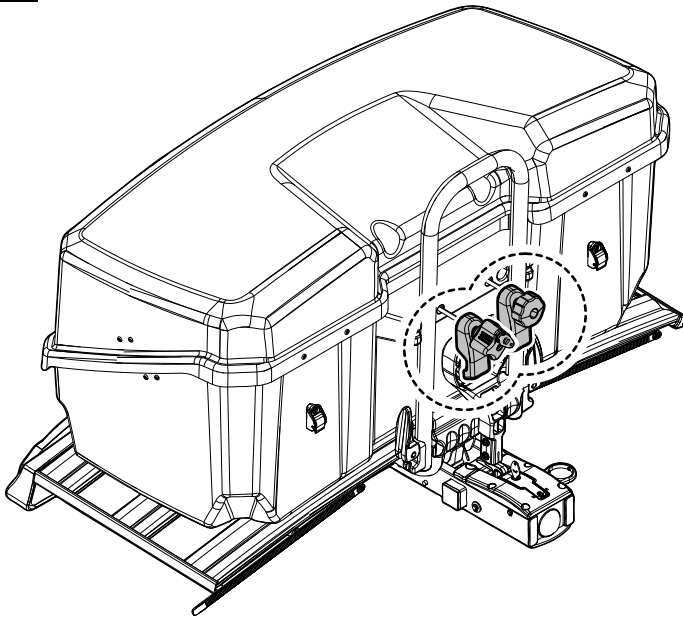



3

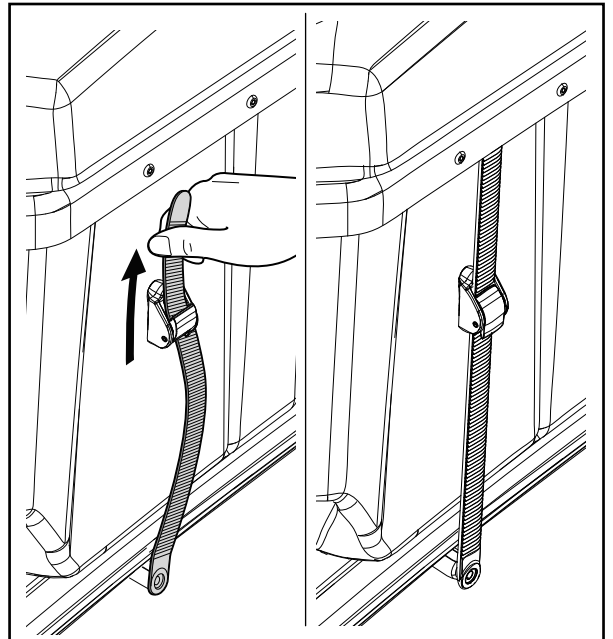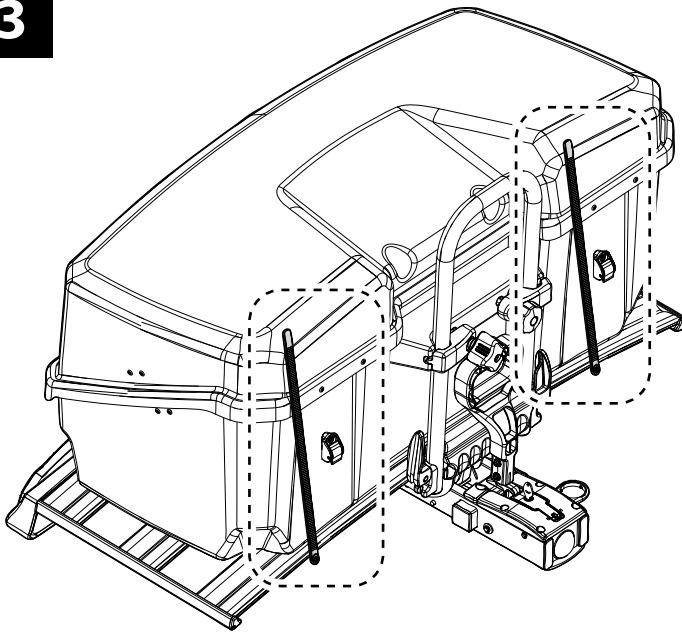

4

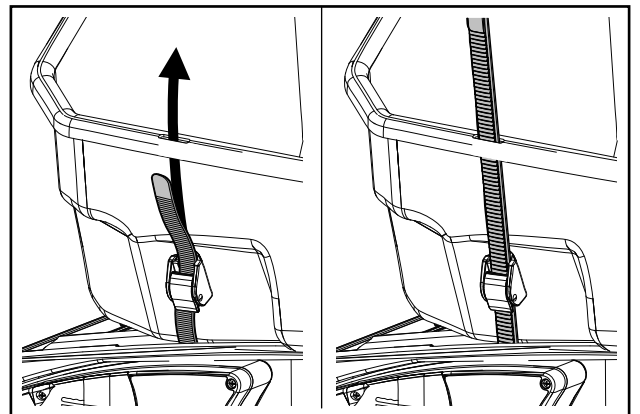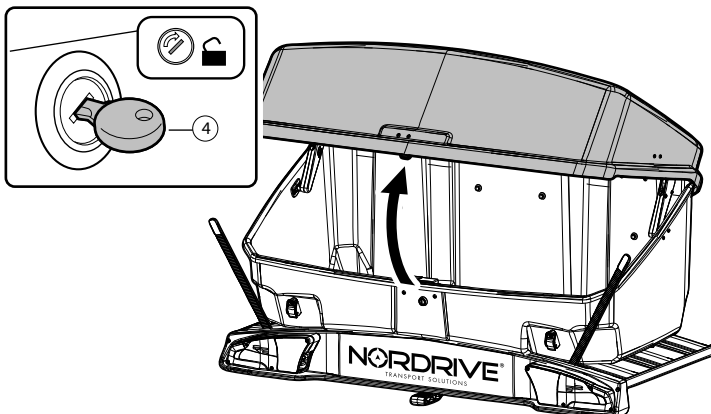

N.		Q.ty
3	 2,5m	1

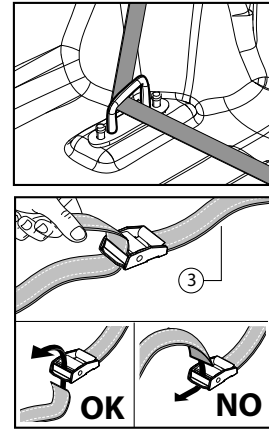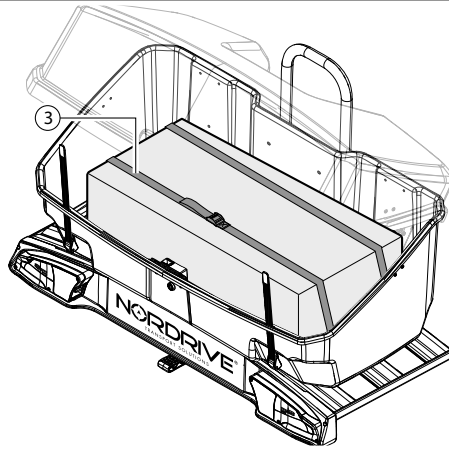

The diagram illustrates the two-step process of attaching the Nordrive battery to the motor unit. In the first step, the battery is shown being lowered into the motor unit. In the second step, the battery is shown being locked into place with a key, indicated by a "CLACK!" sound effect.



- Lot. 38111**

LAMPASPA 2021