

NORDRIVE[®]

TRANSPORT SOLUTIONS

Professional line



Index

PROFESSIONAL LINE	1
Kargo	3
Kargo-Plus	7
Universal optionals	12
Foot kits for vehicles with built-in fittings	14
Foot kits for vehicles with rain gutters	18



Special Auto Trading A/S
Bybjergvej, 13 - DK - 3060 Espergaerde
Denmark
Phone: +45 49176060 - Telefax: +45 49176070
E-mail: satex@satex.dk
www.satex.dk - www.nordrive.dk

Professional line



Kargo-System

It's a carrying solution specifically designed for commercial vehicles. Safety, versatility, sturdiness and elegance are the features of this system.

The system consists of 2 series of bars to be combined with various fitting kits, custom-made to fit every specific van or to fit vehicles equipped with raingutter.



Kargo

STEEL

Tested and approved




max 50 kg
1 bar

KARGO, STEEL ROOF BAR
For commercial vehicles.
Galvanized steel bar with pvc sheath

N10000	115 cm
N10005	135 cm
N10010	150 cm
N10015	180 cm

Box  6

1 PIECE

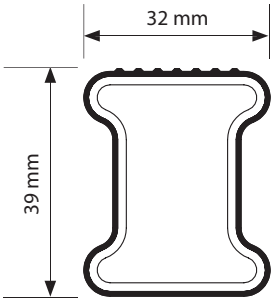


LOAD STOPS K-1 (PAIR)

Easy to move along the bar and adjust according to the load. Keep the non-bulky load firmly in place and prevent it from sliding.

N11001 K-1 11 cm

Box  4 / 12

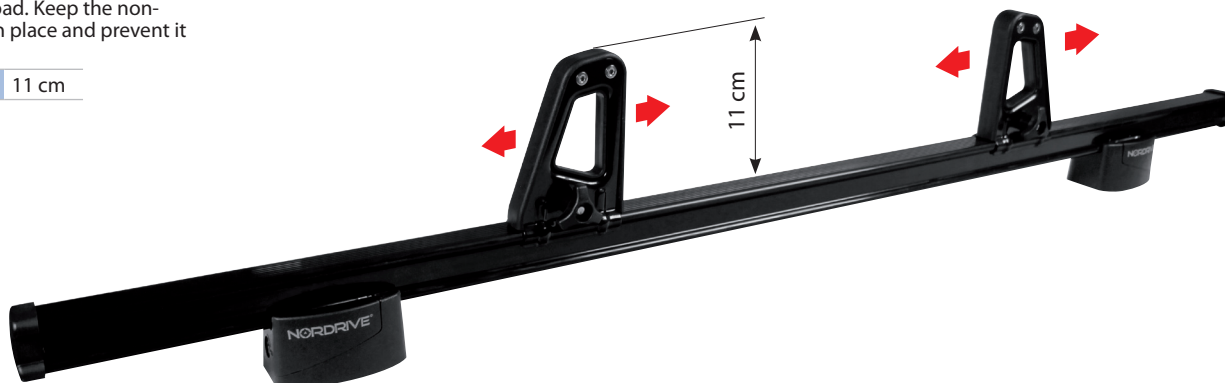


LOAD STOPS K-2 (PAIR)


Easy to move along the bar and adjust according to the load. Keep the bulky load firmly in place and prevent it from sliding.

N11002 K-2 23 cm


Box  4 / 8

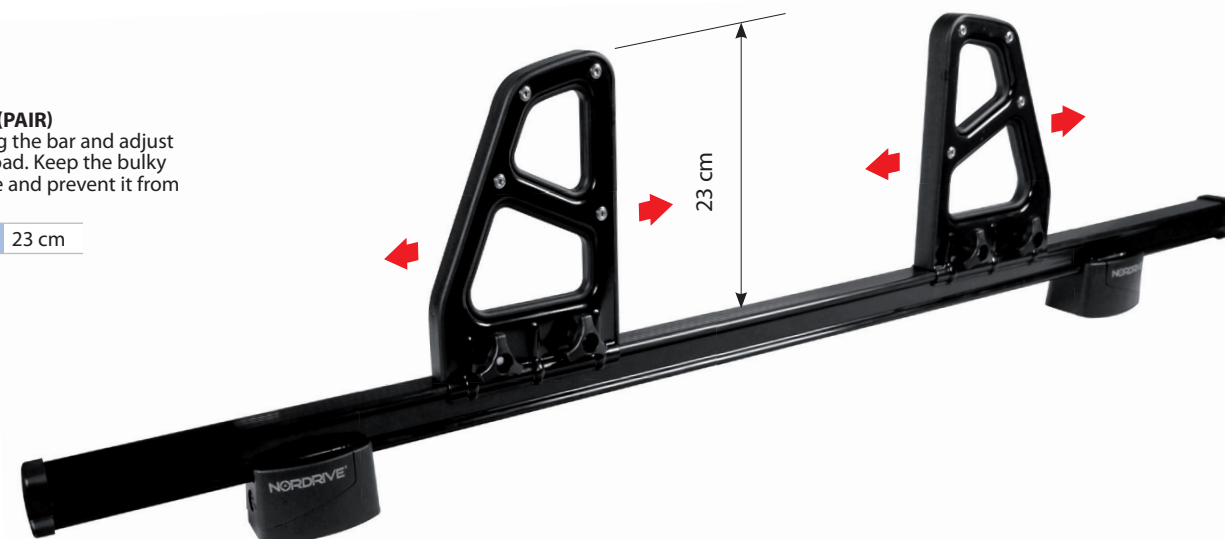

TWO WAYS OF FIXING

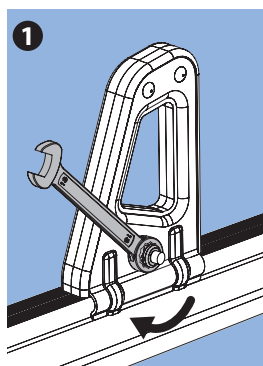


SCREW FIXED MOUNTING
Perfect when the transported cargo is always the same or has the same width.

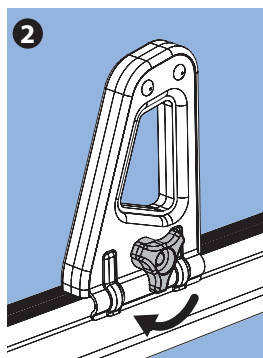

MANUAL KNOBS FIXING
Ideal when the transported cargo often varies in width or when it must be adjusted after loading.



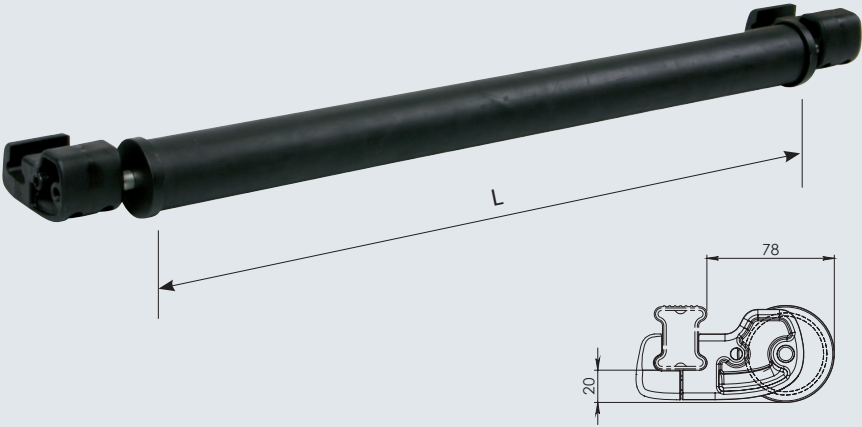


KARGO ROLLER
Metal core with plastic sheath.
Makes it easy to load and unload long
objects from the rear of the vehicle.



N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

Box  4 / 8



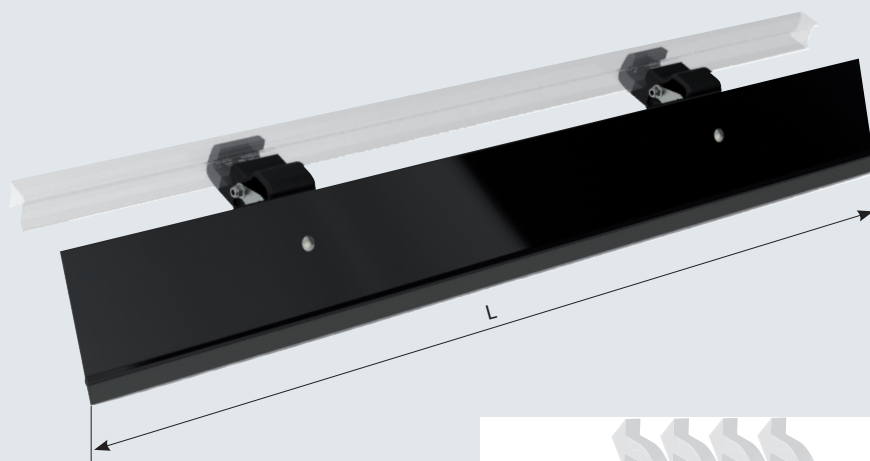

ALUMINIUM

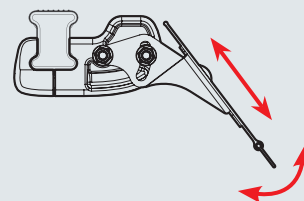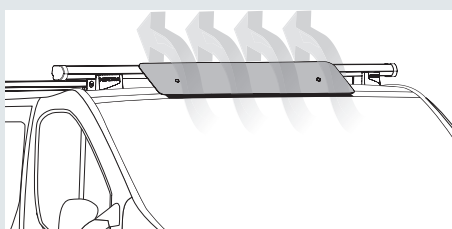

AERO KARGO DEFLECTOR, BLACK

Wind deflector kit for Kargo roof bars.

Functions:

- Improves aerodynamics of the vehicle.
- Helps increasing fuel efficiency.
- Reduces wind-noise while driving.

Features:

- Aluminium.
- Flexible, adapting to the curve of the roof.
- Adjustable extension and angle.
- Suitable for small vans (e.g. Doblò, Fiorino, Bipper, Kangoo, ecc.)

N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

Box  4



Kargo-Plus


ALUMINIUM

NORDRIVE[®]

Tested and approved



max 50 kg
1 bar

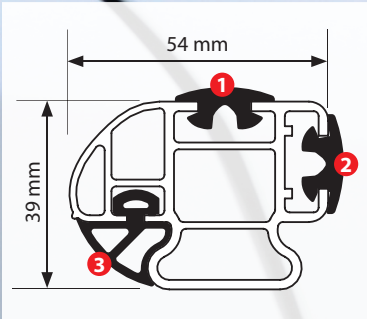

Anodised aluminium bar, equipped with 3 railings.
The top rail **1** contains the anti-slip rubber profile which contacts the transported cargo and it is used also for inserting the load stops, eye-bolts, or other accessories.
The rear rail **2** is for inserting the roller, load stops and eye-bolts.
The front rail **3** is used for the insertion of the adjustable wind deflector Aero Kargo.
The bar is equipped with a contoured rubber profile to optimize the aerodynamics.

KARGO-PLUS, ALUMINIUM ROOF BAR
Roof bar for commercial vehicles.
Aluminium with 3 "T" railings


N10030	115 cm
N10035	135 cm
N10040	150 cm
N10045	180 cm

Box 6

1 PIECE



Fit also on Alumia, Kuma, New Rail Pro bars

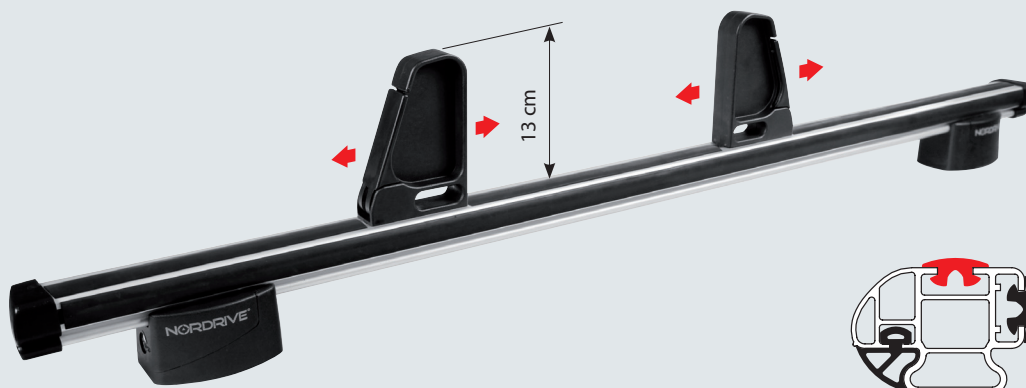


LOAD STOPS KP-1 (PAIR)

Easy to move in the T-track along the bar and adjust according to the load. Keep the non-bulky load firmly in place and prevents it from sliding.

N11031 KP-1

Box 4 / 12

Fit also on Alumia, Kuma, New Rail Pro bars

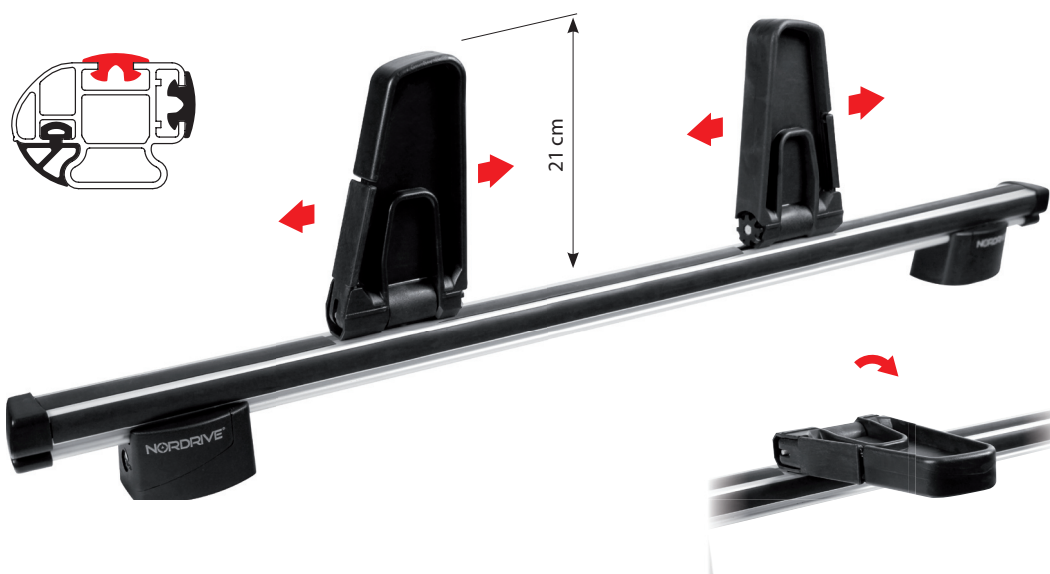

LOAD STOPS KP-20 (PAIR)



Collapsible when not in use, may be used in T-tracks. Easy to move along the bar and adjust according to the load. Keep the bulky load firmly in place and prevents it from sliding.

N11035 KP-20

Box 12





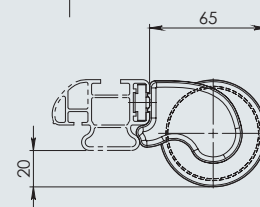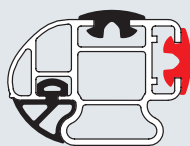

KARGO ROLLER

Metal core with plastic sheath.
Makes it easy to load and unload long
objects from the rear of the vehicle.

N11030	KP-0	L = 64 cm
N11034	KP-7	L = 96 cm

Box 4 / 8




EYE-BOLTS KP-3 (PAIR)

Steel made, may be used in the
top or side T-tracks. To be used for
securing the load, in combination
with ratchet tie down.



N11033 **KP-3**

Box 10 / 100



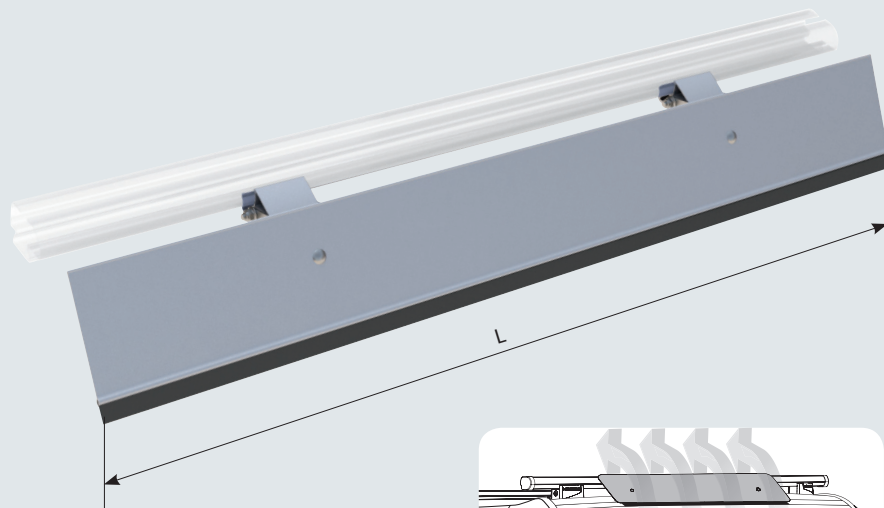

ALUMINIUM

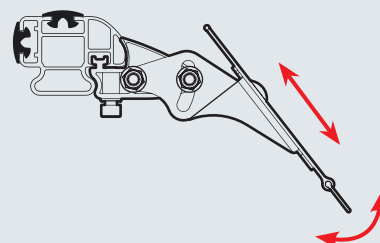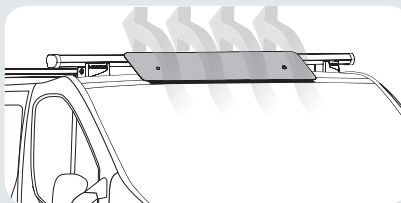

AERO KARGO-PLUS DEFLECTOR

Wind deflector kit for Kargo-Plus roof bars.

Functions:

- Improves aerodynamics of the vehicle.
- Helps increasing fuel efficiency.
- Reduces wind-noise while driving.



Features:

- Aluminium.
- Flexible, adapting to the curve of the roof.
- Adjustable extension and angle.
- Suitable for small vans (e.g. Doblò, Fiorino, Bipper, Kangoo, ecc.)

N11057	KP-9	L = 95 cm
N11058	KP-11	L = 110 cm

Box  4



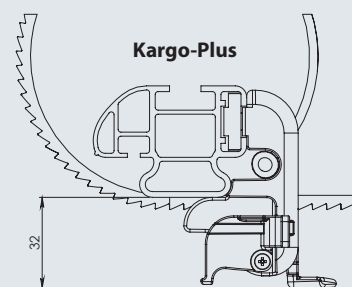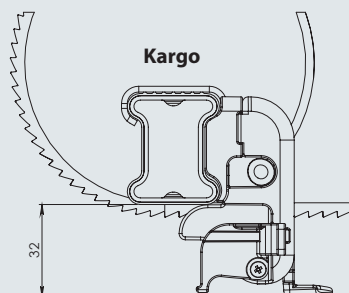

LADDER STOPPER BELT U-5 (PAIR)

Practical and quick-to-use accessory for securing the transported ladder to the Kargo and Kargo-Plus bars. The straps hold the steps, securing the ladder to the bars.

Warning: to be used only in combination with load stoppers.

N11065 U-5

Box 12



LADDER STEP ADAPTER U-6


Useful accessory for the securing of the ladder when the step is not properly aligned and consequently too far from the roof bar to be held by the stopper belt.

Warning: to be used only in combination with stopper belts (art. N11065)

N11067 U-6

Box 5 / 20



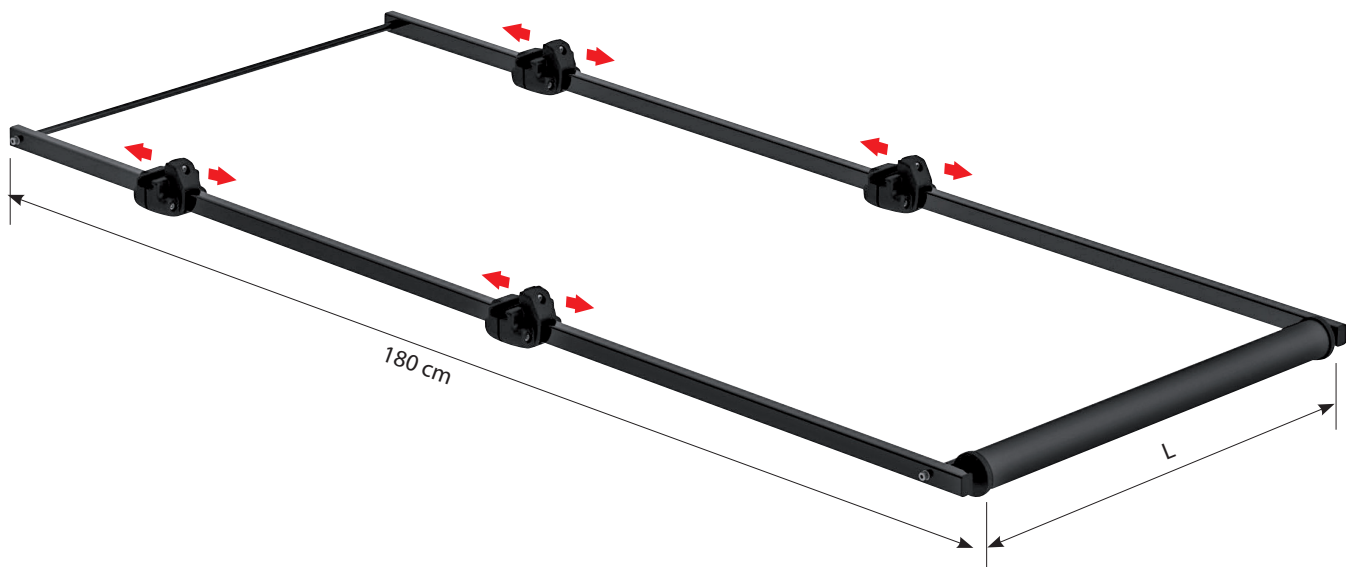


ROLLER + EXTENSION KIT

Specially designed accessory to make loading and unloading possible and easy also on those vehicles having the bar far away from the rear edge of the roof.
Universal, it mounts under the roof bars of any Kargo and Kargo-Plus series
(A space of at least 45 mm is need between the roof and the bar)

N11020	U-0	L = 64 cm
N11021	U-7	L = 96 cm


Box  2

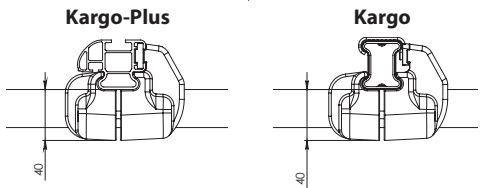



PROFESSIONAL SOLUTIONS

Vehicles with built-in fix points

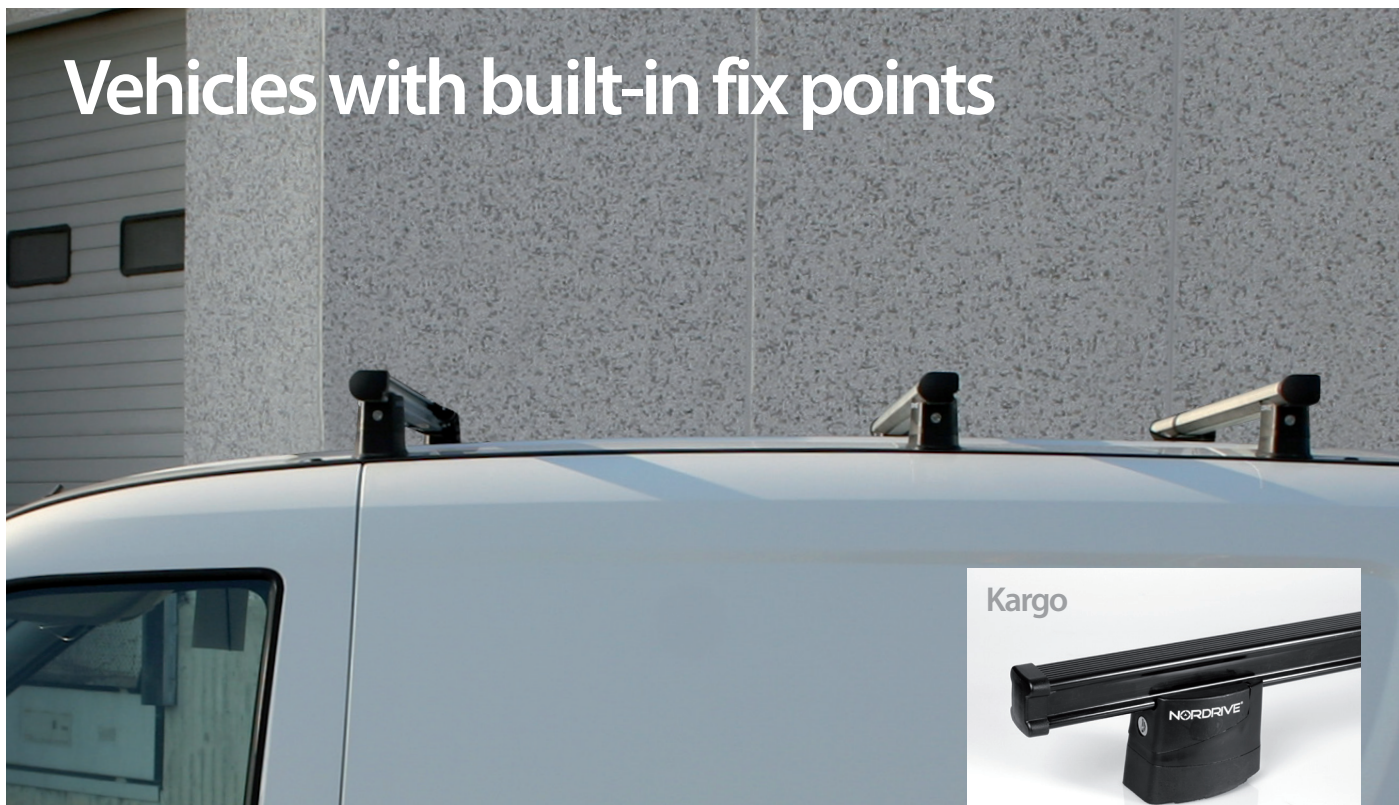


Foot kits for vehicles with built-in fix points

The foot kits use the vehicle's own fix points.
Each fitting base lays on a solid custom-shaped pad.
Easy to install, all the feet are equipped with safety locks.



MAX LOAD CAPACITY

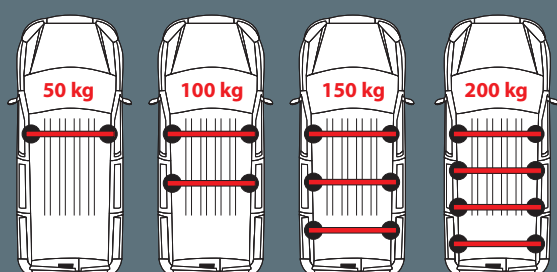

- Never exceed the maximum load indicated in the assembly instructions. This limit is however subject to the maximum load illustrated in the vehicle user and maintenance manual. Always follow instructions for the lowest maximum load.
- Maximum load is intended as: bar weight + weight of any applicable accessories + weight of the load

Vehicles with rain gutters



Foot kit for vehicles with rain gutters

Suitable for Kargo and Kargo-Plus bars.



Each kit contains two feet for the mounting of one single bar.

Kargo



Kargo-Plus



N30310	H = 16-21 cm	GS TÜV
N30315	H = 22-37 cm	GS TÜV
N30320	H = 43-58 cm	


Box 6

ALFA ROMEO



KARGO

Barre +
Kit attacchi



Acciaio
Steel

KARGO-PLUS

Barre +
Kit attacchi




Alluminio
Aluminium

ALFA ROMEO								
ALFA ROMEO - AR8 01/78>12/90	3 barre cm 180	4 barre cm 180			3 barre cm 180	4 barre cm 180		
	N10015 x 3	N10015 x 4			N10045 x 3	N10045 x 4		
	N30315 x 3	N30315 x 4			N30315 x 3	N30315 x 4		
TETTO H1								
ALFA ROMEO - AR8 01/78>12/90	3 barre cm 180	4 barre cm 180			3 barre cm 180	4 barre cm 180		
	N10015 x 3	N10015 x 4			N10045 x 3	N10045 x 4		
	N30320 x 3	N30320 x 4			N30320 x 3	N30320 x 4		
TETTO H3								


BEDFORD								
BEDFORD - Rascal 01/90>	2 barre cm 135	3 barre cm 135			2 barre cm 135	3 barre cm 135		
	N10005 x 2	N10005 x 3			N10035 x 2	N10035 x 3		
	N30315 x 2	N30315 x 3			N30315 x 2	N30315 x 3		

CITROEN								
CITROEN - Berlingo 05/96>03/08	2 barre cm 135	2 barre cm 150			2 barre cm 135	2 barre cm 150		
	N10005 x 2	N10010 x 2			N10035 x 2	N10040 x 2		
	N30012 x 1	N30012 x 1			N30012 x 1	N30012 x 1		
CITROEN - Berlingo 04/08>	2 barre cm 135	2 barre cm 150	3 barre cm 135	3 barre cm 150	2 barre cm 135	2 barre cm 150	3 barre cm 135	3 barre cm 150
	N10005 x 2	N10010 x 2	N10005 x 3	N10010 x 3	N10035 x 2	N10040 x 2	N10035 x 3	N10040 x 3
	N30202 x 1	N30202 x 1	N30203 x 1	N30203 x 1	N30202 x 1	N30202 x 1	N30203 x 1	N30203 x 1
PASSO L2								
CITROEN - Berlingo (no giraffone) 04/08>	2 barre cm 135	2 barre cm 150	3 barre cm 135	3 barre cm 150	2 barre cm 135	2 barre cm 150	3 barre cm 135	3 barre cm 150
	N10005 x 2	N10010 x 2	N10005 x 3	N10010 x 3	N10035 x 2	N10040 x 2	N10035 x 3	N10040 x 3
	N30202 x 1	N30202 x 1	N30203 x 1	N30203 x 1	N30202 x 1	N30202 x 1	N30203 x 1	N30203 x 1
PASSO L1								
CITROEN - C25 01/81>02/94	3 barre cm 180	4 barre cm 180			3 barre cm 180	4 barre cm 180		
	N10015 x 3	N10015 x 4			N10045 x 3	N10045 x 4		
	N30310 x 3	N30310 x 4			N30310 x 3	N30310 x 4		
TETTO H1								
CITROEN - C25 01/81>02/94	3 barre cm 180	4 barre cm 180			3 barre cm 180	4 barre cm 180		
	N10015 x 3	N10015 x 4			N10045 x 3	N10045 x 4		
	N30320 x 3	N30320 x 4			N30320 x 3	N30320 x 4		
TETTO H3								
CITROEN - C35 01/74>12/92	3 barre cm 150	4 barre cm 150			3 barre cm 150	4 barre cm 150		
	N10010 x 3	N10010 x 4			N10040 x 3	N10040 x 4		
	N30315 x 3	N30315 x 4			N30315 x 3	N30315 x 4		
TETTO H1								
CITROEN - Jumper 01/94>03/06	2 barre cm 180	3 barre cm 180			2 barre cm 180	3 barre cm 180		
	N10015 x 2	N10015 x 3			N10045 x 2	N10045 x 3		
	N30022 x 1	N30023 x 1			N30022 x 1	N30023 x 1		
PASSO Corto, Medio, Lungo								
TETTO H1, H2								
CITROEN - Jumper 04/06>	2 barre cm 180	3 barre cm 180			2 barre cm 180	3 barre cm 180		
	N10015 x 2	N10015 x 3			N10045 x 2	N10045 x 3		
	N30032 x 1	N30033 x 1			N30032 x 1	N30033 x 1		
PASSO L1, L2								
TETTO H1, H2								
CITROEN - Jumper 04/06>	2 barre cm 180	3 barre cm 180	4 barre cm 180		2 barre cm 180	3 barre cm 180	4 barre cm 180	
	N10015 x 2	N10015 x 3	N10015 x 4		N10045 x 2	N10045 x 3	N10045 x 4	
	N30032 x 1	N30033 x 1	N30032 x 2		N30032 x 1	N30033 x 1	N30032 x 2	
PASSO L3, L4								
TETTO H2, H3								
CITROEN - Jumpy 10/95>12/06	3 barre cm 135				3 barre cm 135			
	N10005 x 3				N10035 x 3			
	N30043 x 1				N30043 x 1			
PASSO C, M								
TETTO H1, H2								


CITROEN		KARGO				KARGO-PLUS			
		Barre + Kit attacchi			Acciaio Steel	Barre + Kit attacchi			Alluminio Aluminium
CITROEN - Jumpy 01/07>		2 barre cm 150 N10010 x 2 N30192 x 1	3 barre cm 150 N10010 x 3 N30193 x 1			2 barre cm 150 N10040 x 2 N30192 x 1	3 barre cm 150 N10040 x 3 N30193 x 1		
PASSO L1, L2 TETTO H1									
CITROEN - Nemo 12/08>		2 barre cm 150 N10010 x 2 N30182 x 1	3 barre cm 150 N10010 x 3 N30183 x 1			2 barre cm 150 N10040 x 2 N30182 x 1	3 barre cm 150 N10040 x 3 N30183 x 1		
PASSO L1, L2 TETTO H1									
CITROEN - Nemo 5p 12/08>03/14		2 barre cm 150 N10010 x 2 N30182 x 1	3 barre cm 150 N10010 x 3 N30183 x 1			2 barre cm 150 N10040 x 2 N30182 x 1	3 barre cm 150 N10040 x 3 N30183 x 1		
PASSO L1, L2 TETTO H1									

DACIA									
DACIA - Logan Furgovan 02/07>09/13		2 barre cm 115 N10000 x 2 N30252 x 1	2 barre cm 135 N10005 x 2 N30252 x 1	3 barre cm 115 N10000 x 3 N30253 x 1	3 barre cm 135 N10005 x 3 N30253 x 1	2 barre cm 115 N10030 x 2 N30252 x 1	2 barre cm 135 N10035 x 2 N30252 x 1	3 barre cm 115 N10030 x 3 N30253 x 1	3 barre cm 135 N10035 x 3 N30253 x 1
PASSO L1, L2 TETTO H1									

FIAT									
FIAT - Doblo Cargo 11/00>12/09		2 barre cm 135 N10005 x 2 N30002 x 1				2 barre cm 135 N10035 x 2 N30002 x 1			
PASSO Corto TETTO Standard									
FIAT - Doblo Cargo 11/00>12/09		2 barre cm 135 N10005 x 2 N30002 x 1	3 barre cm 135 N10005 x 3 N30003 x 1			2 barre cm 135 N10035 x 2 N30002 x 1	3 barre cm 135 N10035 x 3 N30003 x 1		
PASSO Lungo TETTO Standard									
FIAT - Doblo Cargo 01/10>		2 barre cm 135 N10005 x 2 N30272 x 1	2 barre cm 150 N10010 x 2 N30272 x 1	3 barre cm 135 N10005 x 3 N30273 x 1	3 barre cm 150 N10010 x 3 N30273 x 1	2 barre cm 135 N10035 x 2 N30272 x 1	2 barre cm 150 N10040 x 2 N30272 x 1	3 barre cm 135 N10035 x 3 N30273 x 1	3 barre cm 150 N10040 x 3 N30273 x 1
PASSO Lungo TETTO Standard									
FIAT - Doblo Cargo (no voiletto) 01/10>		2 barre cm 135 N10005 x 2 N30272 x 1	2 barre cm 150 N10010 x 2 N30272 x 1	3 barre cm 135 N10005 x 3 N30273 x 1	3 barre cm 150 N10010 x 3 N30273 x 1	2 barre cm 135 N10035 x 2 N30272 x 1	2 barre cm 150 N10040 x 2 N30272 x 1	3 barre cm 135 N10035 x 3 N30273 x 1	3 barre cm 150 N10040 x 3 N30273 x 1
PASSO Corto TETTO Standard									
FIAT - Doblo Cargo (voiletto) 01/10>		2 barre cm 135 N10005 x 2 N30272 x 1	2 barre cm 150 N10010 x 2 N30272 x 1			2 barre cm 135 N10035 x 2 N30272 x 1	2 barre cm 150 N10040 x 2 N30272 x 1		
PASSO Corto TETTO Standard									
FIAT - Ducato 01/81>06/94		3 barre cm 180 N10015 x 3 N30310 x 3	4 barre cm 180 N10015 x 4 N30310 x 4			3 barre cm 180 N10045 x 3 N30310 x 3	4 barre cm 180 N10045 x 4 N30310 x 4		
TETTO H1									
FIAT - Ducato 01/81>06/94		3 barre cm 180 N10015 x 3 N30320 x 3	4 barre cm 180 N10015 x 4 N30320 x 4			3 barre cm 180 N10045 x 3 N30320 x 3	4 barre cm 180 N10045 x 4 N30320 x 4		
TETTO H3									
FIAT - Ducato 07/94>06/06		2 barre cm 180 N10015 x 2 N30022 x 1	3 barre cm 180 N10015 x 3 N30023 x 1			2 barre cm 180 N10045 x 2 N30022 x 1	3 barre cm 180 N10045 x 3 N30023 x 1		
PASSO Corto, Medio, Lungo TETTO H1, H2, H3									
FIAT - Ducato 07/06>		2 barre cm 180 N10015 x 2 N30032 x 1	3 barre cm 180 N10015 x 3 N30033 x 1			2 barre cm 180 N10045 x 2 N30032 x 1	3 barre cm 180 N10045 x 3 N30033 x 1		
PASSO 3000, 3450 TETTO Standard, Alto									
FIAT - Ducato 07/06>		2 barre cm 180 N10015 x 2 N30032 x 1	3 barre cm 180 N10015 x 3 N30033 x 1	4 barre cm 180 N10015 x 4 N30032 x 2		2 barre cm 180 N10045 x 2 N30032 x 1	3 barre cm 180 N10045 x 3 N30033 x 1	4 barre cm 180 N10045 x 4 N30032 x 2	
PASSO 4035, 4035 XL TETTO Alto, Super Alto									

FIAT 		KARGO Barre + Kit attacchi  Acciaio Steel			KARGO-PLUS Barre + Kit attacchi  Alluminio Aluminium		
FIAT - Fiorino 01/88>08/08		2 barre cm 135 N10005 x 2 N30052 x 1			2 barre cm 135 N10035 x 2 N30052 x 1		
FIAT - Fiorino 09/08>		2 barre cm 150 N10010 x 2 N30182 x 1	3 barre cm 150 N10010 x 3 N30183 x 1		2 barre cm 150 N10040 x 2 N30182 x 1	3 barre cm 150 N10040 x 3 N30183 x 1	
FIAT - Qubo 5p 09/08>		2 barre cm 150 N10010 x 2 N30182 x 1	3 barre cm 150 N10010 x 3 N30183 x 1		2 barre cm 150 N10040 x 2 N30182 x 1	3 barre cm 150 N10040 x 3 N30183 x 1	
FIAT - Scudo 01/95>12/06 PASSO C, M TETTO H1, H2		3 barre cm 135 N10005 x 3 N30043 x 1			3 barre cm 135 N10035 x 3 N30043 x 1		
FIAT - Scudo 01/07> PASSO Corto, Lungo TETTO Standard		2 barre cm 150 N10010 x 2 N30192 x 1	3 barre cm 150 N10010 x 3 N30193 x 1		2 barre cm 150 N10040 x 2 N30192 x 1	3 barre cm 150 N10040 x 3 N30193 x 1	
FIAT - Talento 01/81>02/94		3 barre cm 180 N10015 x 3 N30310 x 3	4 barre cm 180 N10015 x 4 N30310 x 4		3 barre cm 180 N10045 x 3 N30310 x 3	4 barre cm 180 N10045 x 4 N30310 x 4	

FORD							
FORD - Tourneo Courier 03/14>		2 barre cm 135 N10005 x 2 N30302 x 1			2 barre cm 135 N10035 x 2 N30302 x 1		
FORD - Transit 01/86>03/14 TETTO H1		3 barre cm 180 N10015 x 3 N30310 x 3	4 barre cm 180 N10015 x 4 N30310 x 4		3 barre cm 180 N10045 x 3 N30310 x 3	4 barre cm 180 N10045 x 4 N30310 x 4	
FORD - Transit 01/86>03/14 TETTO H2, H3		3 barre cm 180 N10015 x 3 N30315 x 3	4 barre cm 180 N10015 x 4 N30315 x 4		3 barre cm 180 N10045 x 3 N30315 x 3	4 barre cm 180 N10045 x 4 N30315 x 4	
FORD - Transit 04/14> PASSO L2 TETTO H2, H3		3 barre cm 180 N10015 x 3 N30313 x 1			3 barre cm 180 N10045 x 3 N30313 x 1		
FORD - Transit 04/14> PASSO L3, L4 TETTO H2, H3		4 barre cm 180 N10015 x 4 N30314 x 1			4 barre cm 180 N10045 x 4 N30314 x 1		
FORD - Transit Connect 06/02>10/13 PASSO Corto, Lungo TETTO Basso, Alto		2 barre cm 135 N10005 x 2 N30082 x 1	2 barre cm 150 N10010 x 2 N30082 x 1		2 barre cm 135 N10035 x 2 N30082 x 1	2 barre cm 150 N10040 x 2 N30082 x 1	
FORD - Transit Connect 11/13> PASSO L1		2 barre cm 150 N10010 x 2 N30152 x 1			2 barre cm 150 N10040 x 2 N30152 x 1		
FORD - Transit Connect 11/13> PASSO L2		2 barre cm 150 N10010 x 2 N30152 x 1	4 barre cm 150 N10010 x 4 N30152 x 2		2 barre cm 150 N10040 x 2 N30152 x 1	4 barre cm 150 N10040 x 4 N30152 x 2	
FORD - Transit Courier 03/14>		2 barre cm 135 N10005 x 2 N30302 x 1			2 barre cm 135 N10035 x 2 N30302 x 1		

FORD		KARGO Barre + Kit attacchi  Acciaio Steel				KARGO-PLUS Barre + Kit attacchi  Alluminio Aluminium					
		3 barre cm 150 N10010 x 3 N30293 x 1					3 barre cm 150 N10040 x 3 N30293 x 1				
		FORD - Transit Custom 10/12>									
		PASSO L1, L2									
		TETTO Normale									

HYUNDAI									
HYUNDAI - H1 (tetto da forare) 10/97>01/08		3 barre cm 150 N10010 x 3 N30063 x 1				3 barre cm 150 N10040 x 3 N30063 x 1			
PASSO Corto									
HYUNDAI - H1 (tetto da forare) 10/97>01/08		3 barre cm 150 N10010 x 3 N30073 x 1				3 barre cm 150 N10040 x 3 N30073 x 1			
PASSO Lungo									
HYUNDAI - H1 (tetto da forare) 02/08>		3 barre cm 150 N10010 x 3 N30233 x 1				3 barre cm 150 N10040 x 3 N30233 x 1			
HYUNDAI - H100 01/02>12/10		3 barre cm 150 N10010 x 3 N30315 x 3	4 barre cm 150 N10010 x 4 N30315 x 4			3 barre cm 150 N10040 x 3 N30315 x 3	4 barre cm 150 N10040 x 4 N30315 x 4		
HYUNDAI - H200 01/02>12/10		3 barre cm 150 N10010 x 3 N30315 x 3	4 barre cm 150 N10010 x 4 N30315 x 4			3 barre cm 150 N10040 x 3 N30315 x 3	4 barre cm 150 N10040 x 4 N30315 x 4		
HYUNDAI - H220 01/02>12/10		3 barre cm 150 N10010 x 3 N30315 x 3	4 barre cm 150 N10010 x 4 N30315 x 4			3 barre cm 150 N10040 x 3 N30315 x 3	4 barre cm 150 N10040 x 4 N30315 x 4		

IVECO									
IVECO - Daily 01/78>12/00		3 barre cm 180 N10015 x 3 N30315 x 3	4 barre cm 180 N10015 x 4 N30315 x 4			3 barre cm 180 N10045 x 3 N30315 x 3	4 barre cm 180 N10045 x 4 N30315 x 4		
TETTO H1									
IVECO - Daily 01/78>12/00		3 barre cm 180 N10015 x 3 N30320 x 3	4 barre cm 180 N10015 x 4 N30320 x 4			3 barre cm 180 N10045 x 3 N30320 x 3	4 barre cm 180 N10045 x 4 N30320 x 4		
TETTO H3									
IVECO - Daily 05/99>04/06		3 barre cm 180 N10015 x 3 N30093 x 1				3 barre cm 180 N10045 x 3 N30093 x 1			
PASSO 3000, 3000 L									
TETTO H1									
IVECO - Daily 05/06>05/14		3 barre cm 150 N10010 x 3 N30103 x 1	3 barre cm 180 N10015 x 3 N30103 x 1			3 barre cm 150 N10040 x 3 N30103 x 1	3 barre cm 180 N10045 x 3 N30103 x 1		
PASSO 3000, 3000 L, 3300, 3950									
TETTO H2									
IVECO - Daily 06/14>		3 barre cm 180 N10015 x 3 N30093 x 1				3 barre cm 180 N10045 x 3 N30093 x 1			
PASSO 3000, 3520									
TETTO H1									
IVECO - Daily 06/14>		2 barre cm 150 N10010 x 2 N30332 x 1				2 barre cm 150 N10040 x 2 N30332 x 1			
PASSO 3520									
TETTO H2									
IVECO - Daily 06/14>		2 barre cm 150 N10010 x 2 N30332 x 1	3 barre cm 150 N10010 x 3 N30333 x 1			2 barre cm 150 N10040 x 2 N30332 x 1	3 barre cm 150 N10040 x 3 N30333 x 1		
PASSO 3520 L, 4100, 4100 L									
TETTO H2									

IVECO		KARGO				KARGO-PLUS			
		Barre + Kit attacchi		Acciaio Steel		Barre + Kit attacchi		Alluminio Aluminium	
IVECO - Zeta 01/77>12/89		3 barre cm 180 N10015 x 3 N30315 x 3	4 barre cm 180 N10015 x 4 N30315 x 4			3 barre cm 180 N10045 x 3 N30315 x 3	4 barre cm 180 N10045 x 4 N30315 x 4		
TETTO H1									
IVECO - Zeta 01/77>12/89		3 barre cm 180 N10015 x 3 N30320 x 3	4 barre cm 180 N10015 x 4 N30320 x 4			3 barre cm 180 N10045 x 3 N30320 x 3	4 barre cm 180 N10045 x 4 N30320 x 4		
TETTO H3									

LAND ROVER



LAND ROVER - Defender 3p 01/90>	2 barre cm 150 N10010 x 2 N30315 x 2				2 barre cm 150 N10040 x 2 N30315 x 2			
------------------------------------	--	--	--	--	--	--	--	--

MERCEDES

MERCEDES - Citan (no voletto) 10/12> PASSO Compact, Long	2 barre cm 135 N10005 x 2 N30222 x 1	2 barre cm 150 N10010 x 2 N30222 x 1			2 barre cm 135 N10035 x 2 N30222 x 1	2 barre cm 150 N10040 x 2 N30222 x 1		
MERCEDES - Classe V 03/14>	3 barre cm 180 N10015 x 3 N30113 x 1				3 barre cm 180 N10045 x 3 N30113 x 1			
MERCEDES - Sprinter 01/95>05/06 TETTO H1	3 barre cm 180 N10015 x 3 N30310 x 3	4 barre cm 180 N10015 x 4 N30310 x 4			3 barre cm 180 N10045 x 3 N30310 x 3	4 barre cm 180 N10045 x 4 N30310 x 4		
MERCEDES - Sprinter 01/95>05/06 TETTO H3	3 barre cm 180 N10015 x 3 N30315 x 3	4 barre cm 180 N10015 x 4 N30315 x 4			3 barre cm 180 N10045 x 3 N30315 x 3	4 barre cm 180 N10045 x 4 N30315 x 4		
MERCEDES - Sprinter 06/06> PASSO Compact, Standard, Long, Extralong TETTO Normale, Alto	4 barre cm 180 N10015 x 4 N30214 x 1				4 barre cm 180 N10045 x 4 N30214 x 1			
MERCEDES - Vito 09/03>12/14 PASSO Compact, Long, Extralong TETTO Normale	3 barre cm 180 N10015 x 3 N30113 x 1				3 barre cm 180 N10045 x 3 N30113 x 1			
MERCEDES - Vito 01/15> PASSO Compact, Long, Extralong	3 barre cm 180 N10015 x 3 N30113 x 1				3 barre cm 180 N10045 x 3 N30113 x 1			
MERCEDES - Vito (profilo scanalato) 08/96>08/03	2 barre cm 150 N10010 x 2 N30112 x 1	2 barre cm 180 N10015 x 2 N30112 x 1			2 barre cm 150 N10040 x 2 N30112 x 1	2 barre cm 180 N10045 x 2 N30112 x 1		


NISSAN

NISSAN - Evalia 10/11>	2 barre cm 135 N10005 x 2 N30262 x 1	3 barre cm 135 N10005 x 3 N30263 x 1			2 barre cm 135 N10035 x 2 N30262 x 1	3 barre cm 135 N10035 x 3 N30263 x 1		
NISSAN - Interstar 07/02>12/10 PASSO L1, L2, L3 TETTO H1, H2	3 barre cm 180 N10015 x 3 N30123 x 1				3 barre cm 180 N10045 x 3 N30123 x 1			


NISSAN		KARGO Barre + Kit attacchi	 Acciaio Steel	KARGO-PLUS Barre + Kit attacchi	 Alluminio Aluminium				
NISSAN - Interstar 07/02>12/10 PASSO L2, L3 TETTO H3		3 barre cm 150 N10010 x 3 N30123 x 1			3 barre cm 150 N10040 x 3 N30123 x 1				
NISSAN - Kubistar 08/03>12/09 PASSO Maxi		2 barre cm 115 N10000 x 2 N30132 x 1	2 barre cm 135 N10005 x 2 N30132 x 1		2 barre cm 115 N10030 x 2 N30132 x 1	2 barre cm 135 N10035 x 2 N30132 x 1			
NISSAN - Kubistar (no voletto) 08/03>12/09		2 barre cm 115 N10000 x 2 N30132 x 1	2 barre cm 135 N10005 x 2 N30132 x 1		2 barre cm 115 N10030 x 2 N30132 x 1	2 barre cm 135 N10035 x 2 N30132 x 1			
NISSAN - NV200 09/09>		2 barre cm 135 N10005 x 2 N30262 x 1	3 barre cm 135 N10005 x 3 N30263 x 1		2 barre cm 135 N10035 x 2 N30262 x 1	3 barre cm 135 N10035 x 3 N30263 x 1			
NISSAN - Nv400 01/12> PASSO L1, L2, L3, L4 TETTO H1, H2		2 barre cm 150 N10010 x 2 N30282 x 1	2 barre cm 180 N10015 x 2 N30282 x 1	4 barre cm 150 N10010 x 4 N30282 x 2	4 barre cm 180 N10015 x 4 N30282 x 2	2 barre cm 150 N10040 x 2 N30282 x 1	2 barre cm 180 N10045 x 2 N30282 x 1	4 barre cm 150 N10040 x 4 N30282 x 2	4 barre cm 180 N10045 x 4 N30282 x 2
NISSAN - Primastar 09/02>05/14 PASSO L1, L2 TETTO H1		3 barre cm 180 N10015 x 3 N30143 x 1	4 barre cm 180 N10015 x 4 N30144 x 1		3 barre cm 180 N10045 x 3 N30143 x 1	4 barre cm 180 N10045 x 4 N30144 x 1			
NISSAN - Trade 75 01/87>12/01 TETTO H1		3 barre cm 150 N10010 x 3 N30315 x 3	4 barre cm 150 N10010 x 4 N30315 x 4		3 barre cm 150 N10040 x 3 N30315 x 3	4 barre cm 150 N10040 x 4 N30315 x 4			
NISSAN - Trade 75 01/87>12/01 TETTO H3		3 barre cm 150 N10010 x 3 N30320 x 3	4 barre cm 150 N10010 x 4 N30320 x 4		3 barre cm 150 N10040 x 3 N30320 x 3	4 barre cm 150 N10040 x 4 N30320 x 4			
NISSAN - Vanette 01/78>12/08 TETTO H1		3 barre cm 150 N10010 x 3 N30315 x 3	4 barre cm 150 N10010 x 4 N30315 x 4		3 barre cm 150 N10040 x 3 N30315 x 3	4 barre cm 150 N10040 x 4 N30315 x 4			

OM								
OM - Grinta 01/78>12/90 TETTO H1	3 barre cm 180 N10015 x 3 N30315 x 3	4 barre cm 180 N10015 x 4 N30315 x 4			3 barre cm 180 N10045 x 3 N30315 x 3	4 barre cm 180 N10045 x 4 N30315 x 4		
OM - Grinta 01/78>12/90 TETTO H3	3 barre cm 180 N10015 x 3 N30320 x 3	4 barre cm 180 N10015 x 4 N30320 x 4			3 barre cm 180 N10045 x 3 N30320 x 3	4 barre cm 180 N10045 x 4 N30320 x 4		

OPEL								
OPEL - Combo 04/12>	2 barre cm 135 N10005 x 2 N30272 x 1	2 barre cm 150 N10010 x 2 N30272 x 1	3 barre cm 135 N10005 x 3 N30273 x 1	3 barre cm 150 N10010 x 3 N30273 x 1	2 barre cm 135 N10035 x 2 N30272 x 1	2 barre cm 150 N10040 x 2 N30272 x 1	3 barre cm 135 N10035 x 3 N30273 x 1	3 barre cm 150 N10040 x 3 N30273 x 1
OPEL - Combo (no Combo Tour) 10/01>03/12	2 barre cm 135 N10005 x 2 N30242 x 1				2 barre cm 135 N10035 x 2 N30242 x 1			
OPEL - Movano 07/98>04/10 PASSO L1, L2, L3 TETTO H1, H2, H3	3 barre cm 180 N10015 x 3 N30123 x 1				3 barre cm 180 N10045 x 3 N30123 x 1			

OPEL		KARGO Barre + Kit attacchi  Acciaio Steel				KARGO-PLUS Barre + Kit attacchi  Alluminio Aluminium			
OPEL - Movano 08/10> PASSO L1, L2, L3, L4 TETTO H1, H2		2 barre cm 150 N10010 x 2 N30282 x 1	2 barre cm 180 N10015 x 2 N30282 x 1	4 barre cm 150 N10010 x 4 N30282 x 2	4 barre cm 180 N10015 x 4 N30282 x 2	2 barre cm 150 N10040 x 2 N30282 x 1	2 barre cm 180 N10045 x 2 N30282 x 1	4 barre cm 150 N10040 x 4 N30282 x 2	4 barre cm 180 N10045 x 4 N30282 x 2
OPEL - Vivaro 08/01>12/13 PASSO L1, L2 TETTO H1		3 barre cm 180 N10015 x 3 N30143 x 1	4 barre cm 180 N10015 x 4 N30144 x 1			3 barre cm 180 N10045 x 3 N30143 x 1	4 barre cm 180 N10045 x 4 N30144 x 1		
OPEL - Vivaro 01/14> PASSO L1, L2 TETTO H1		3 barre cm 180 N10015 x 3 N30323 x 1	4 barre cm 180 N10015 x 4 N30324 x 1			3 barre cm 180 N10045 x 3 N30323 x 1	4 barre cm 180 N10045 x 4 N30324 x 1		


PEUGEOT									
PEUGEOT - Bipper 05/08>		2 barre cm 150 N10010 x 2 N30182 x 1	3 barre cm 150 N10010 x 3 N30183 x 1			2 barre cm 150 N10040 x 2 N30182 x 1	3 barre cm 150 N10040 x 3 N30183 x 1		
PEUGEOT - Boxer 02/94>05/06 PASSO Corto, Medio, Lungo TETTO H1, H2, H3		2 barre cm 180 N10015 x 2 N30022 x 1	3 barre cm 180 N10015 x 3 N30023 x 1			2 barre cm 180 N10045 x 2 N30022 x 1	3 barre cm 180 N10045 x 3 N30023 x 1		
PEUGEOT - Boxer 04/06> PASSO L1, L2 TETTO H1, H2		2 barre cm 180 N10015 x 2 N30032 x 1	3 barre cm 180 N10015 x 3 N30033 x 1			2 barre cm 180 N10045 x 2 N30032 x 1	3 barre cm 180 N10045 x 3 N30033 x 1		
PEUGEOT - Boxer 04/06> PASSO L3, L4 TETTO H2, H3		2 barre cm 180 N10015 x 2 N30032 x 1	3 barre cm 180 N10015 x 3 N30033 x 1	4 barre cm 180 N10015 x 4 N30032 x 2		2 barre cm 180 N10045 x 2 N30032 x 1	3 barre cm 180 N10045 x 3 N30033 x 1	4 barre cm 180 N10045 x 4 N30032 x 2	
PEUGEOT - Expert 10/95>12/06 PASSO C, L TETTO H1		3 barre cm 135 N10005 x 3 N30043 x 1				3 barre cm 135 N10035 x 3 N30043 x 1			
PEUGEOT - Expert 01/07> PASSO L1, L2 TETTO H1		2 barre cm 150 N10010 x 2 N30192 x 1	3 barre cm 150 N10010 x 3 N30193 x 1			2 barre cm 150 N10040 x 2 N30192 x 1	3 barre cm 150 N10040 x 3 N30193 x 1		
PEUGEOT - Expert Tepee 01/07> PASSO L1		2 barre cm 150 N10010 x 2 N30192 x 1	3 barre cm 150 N10010 x 3 N30193 x 1			2 barre cm 150 N10040 x 2 N30192 x 1	3 barre cm 150 N10040 x 3 N30193 x 1		
PEUGEOT - J5 01/81>02/94 TETTO H1		3 barre cm 180 N10015 x 3 N30310 x 3	4 barre cm 180 N10015 x 4 N30310 x 4			3 barre cm 180 N10045 x 3 N30310 x 3	4 barre cm 180 N10045 x 4 N30310 x 4		
PEUGEOT - J5 01/81>02/94 TETTO H3		3 barre cm 180 N10015 x 3 N30320 x 3	4 barre cm 180 N10015 x 4 N30320 x 4			3 barre cm 180 N10045 x 3 N30320 x 3	4 barre cm 180 N10045 x 4 N30320 x 4		
PEUGEOT - Partner 05/96>03/08		2 barre cm 135 N10005 x 2 N30012 x 1	2 barre cm 150 N10010 x 2 N30012 x 1			2 barre cm 135 N10035 x 2 N30012 x 1	2 barre cm 150 N10040 x 2 N30012 x 1		
PEUGEOT - Partner 04/08> PASSO L2		2 barre cm 135 N10005 x 2 N30202 x 1	2 barre cm 150 N10010 x 2 N30202 x 1	3 barre cm 135 N10005 x 3 N30203 x 1	3 barre cm 150 N10010 x 3 N30203 x 1	2 barre cm 135 N10035 x 2 N30202 x 1	2 barre cm 150 N10040 x 2 N30202 x 1	3 barre cm 135 N10035 x 3 N30203 x 1	3 barre cm 150 N10040 x 3 N30203 x 1
PEUGEOT - Partner (no giraffone) 04/08> PASSO L1		2 barre cm 135 N10005 x 2 N30202 x 1	2 barre cm 150 N10010 x 2 N30202 x 1	3 barre cm 135 N10005 x 3 N30203 x 1	3 barre cm 150 N10010 x 3 N30203 x 1	2 barre cm 135 N10035 x 2 N30202 x 1	2 barre cm 150 N10040 x 2 N30202 x 1	3 barre cm 135 N10035 x 3 N30203 x 1	3 barre cm 150 N10040 x 3 N30203 x 1

PEUGEOT 		KARGO Barre + Kit attacchi 				KARGO-PLUS Barre + Kit attacchi 			
PEUGEOT - Partner Tepee 5p 05/08>		<i>2 barre cm 135</i> N10005 x 2 N30202 x 1	<i>2 barre cm 150</i> N10010 x 2 N30202 x 1	<i>3 barre cm 135</i> N10005 x 3 N30203 x 1	<i>3 barre cm 150</i> N10010 x 3 N30203 x 1	<i>2 barre cm 135</i> N10035 x 2 N30202 x 1	<i>2 barre cm 150</i> N10040 x 2 N30202 x 1	<i>3 barre cm 135</i> N10035 x 3 N30203 x 1	<i>3 barre cm 150</i> N10040 x 3 N30203 x 1
PEUGEOT - Ranch 05/96>12/02		<i>2 barre cm 135</i> N10005 x 2 N30012 x 1	<i>2 barre cm 150</i> N10010 x 2 N30012 x 1			<i>2 barre cm 135</i> N10035 x 2 N30012 x 1	<i>2 barre cm 150</i> N10040 x 2 N30012 x 1		

PIAGGIO									
PIAGGIO - Porter 01/93>		<i>2 barre cm 135</i> N10005 x 2 N30315 x 2	<i>3 barre cm 135</i> N10005 x 3 N30315 x 3			<i>2 barre cm 135</i> N10035 x 2 N30315 x 2	<i>3 barre cm 135</i> N10035 x 3 N30315 x 3		

RENAULT									
RENAULT - Kangoo (no giraffone) 02/08> PASSO Express Compact, Express		<i>2 barre cm 135</i> N10005 x 2 N30222 x 1	<i>2 barre cm 150</i> N10010 x 2 N30222 x 1			<i>2 barre cm 135</i> N10035 x 2 N30222 x 1	<i>2 barre cm 150</i> N10040 x 2 N30222 x 1		
RENAULT - Kangoo (no voletto) 08/97>01/08		<i>2 barre cm 115</i> N10000 x 2 N30132 x 1	<i>2 barre cm 135</i> N10005 x 2 N30132 x 1			<i>2 barre cm 115</i> N10030 x 2 N30132 x 1	<i>2 barre cm 135</i> N10035 x 2 N30132 x 1		
RENAULT - Master 07/97>01/10 PASSO L1, L2, L3 TETTO H1, H2		<i>3 barre cm 180</i> N10015 x 3 N30123 x 1				<i>3 barre cm 180</i> N10045 x 3 N30123 x 1			
RENAULT - Master 07/97>01/10 PASSO L3 TETTO H3		<i>3 barre cm 150</i> N10010 x 3 N30123 x 1				<i>3 barre cm 150</i> N10040 x 3 N30123 x 1			
RENAULT - Master 02/10> PASSO L1, L2, L3, L4 TETTO H1, H2		<i>2 barre cm 150</i> N10010 x 2 N30282 x 1	<i>2 barre cm 180</i> N10015 x 2 N30282 x 1	<i>4 barre cm 150</i> N10010 x 4 N30282 x 2	<i>4 barre cm 180</i> N10015 x 4 N30282 x 2	<i>2 barre cm 150</i> N10040 x 2 N30282 x 1	<i>2 barre cm 180</i> N10045 x 2 N30282 x 1	<i>4 barre cm 150</i> N10040 x 4 N30282 x 2	<i>4 barre cm 180</i> N10045 x 4 N30282 x 2
RENAULT - Trafic 01/81>02/01 TETTO H1		<i>3 barre cm 180</i> N10015 x 3 N30315 x 3	<i>4 barre cm 180</i> N10015 x 4 N30315 x 4			<i>3 barre cm 180</i> N10045 x 3 N30315 x 3	<i>4 barre cm 180</i> N10045 x 4 N30315 x 4		
RENAULT - Trafic 01/81>02/01 TETTO H3		<i>3 barre cm 180</i> N10015 x 3 N30320 x 3	<i>4 barre cm 180</i> N10015 x 4 N30320 x 4			<i>3 barre cm 180</i> N10045 x 3 N30320 x 3	<i>4 barre cm 180</i> N10045 x 4 N30320 x 4		
RENAULT - Trafic 03/01>05/14 PASSO L1, L2 TETTO H1		<i>3 barre cm 180</i> N10015 x 3 N30143 x 1	<i>4 barre cm 180</i> N10015 x 4 N30144 x 1			<i>3 barre cm 180</i> N10045 x 3 N30143 x 1	<i>4 barre cm 180</i> N10045 x 4 N30144 x 1		
RENAULT - Trafic 06/14> PASSO L1, L2 TETTO H1		<i>3 barre cm 180</i> N10015 x 3 N30323 x 1	<i>4 barre cm 180</i> N10015 x 4 N30324 x 1			<i>3 barre cm 180</i> N10045 x 3 N30323 x 1	<i>4 barre cm 180</i> N10045 x 4 N30324 x 1		

SUBARU									
SUBARU - Wagon E10 01/83>12/99		<i>2 barre cm 135</i> N10005 x 2 N30315 x 2	<i>3 barre cm 135</i> N10005 x 3 N30315 x 3			<i>2 barre cm 135</i> N10035 x 2 N30315 x 2	<i>3 barre cm 135</i> N10035 x 3 N30315 x 3		


SUBARU		KARGO Barre + Kit attacchi  Acciaio Steel				KARGO-PLUS Barre + Kit attacchi  Alluminio Aluminium			
		SUBARU - Wagon E12 01/83>12/99	2 barre cm 135 N10005 x 2 N30315 x 2	3 barre cm 135 N10005 x 3 N30315 x 3			2 barre cm 135 N10035 x 2 N30315 x 2	3 barre cm 135 N10035 x 3 N30315 x 3	

SUZUKI									
SUZUKI - Porter Curry 01/82>12/98	<i>2 barre cm 135</i> N10005 x 2 N30315 x 2	<i>3 barre cm 135</i> N10005 x 3 N30315 x 3			<i>2 barre cm 135</i> N10035 x 2 N30315 x 2	<i>3 barre cm 135</i> N10035 x 3 N30315 x 3			

TOYOTA									
TOYOTA - Hiace 01/82>12/98	<i>3 barre cm 150</i> N10010 x 3 N30315 x 3	<i>4 barre cm 150</i> N10010 x 4 N30315 x 4			<i>3 barre cm 150</i> N10040 x 3 N30315 x 3	<i>4 barre cm 150</i> N10040 x 4 N30315 x 4			
TOYOTA - Liteace 01/70>12/08	<i>2 barre cm 135</i> N10005 x 2 N30315 x 2	<i>3 barre cm 135</i> N10005 x 3 N30315 x 3			<i>2 barre cm 135</i> N10035 x 2 N30315 x 2	<i>3 barre cm 135</i> N10035 x 3 N30315 x 3			
TOYOTA - Proace 12/13> PASSO L1, L2 TETTO H1	<i>2 barre cm 150</i> N10010 x 2 N30192 x 1	<i>3 barre cm 150</i> N10010 x 3 N30193 x 1			<i>2 barre cm 150</i> N10040 x 2 N30192 x 1	<i>3 barre cm 150</i> N10040 x 3 N30193 x 1			

VOLKSWAGEN									
VOLKSWAGEN - Caddy 03/04>	<i>2 barre cm 135</i> N10005 x 2 N30162 x 1	<i>2 barre cm 150</i> N10010 x 2 N30162 x 1			<i>2 barre cm 135</i> N10035 x 2 N30162 x 1	<i>2 barre cm 150</i> N10040 x 2 N30162 x 1			
VOLKSWAGEN - Caddy Maxi 09/07>	<i>3 barre cm 135</i> N10005 x 3 N30163 x 1	<i>3 barre cm 150</i> N10010 x 3 N30163 x 1			<i>3 barre cm 135</i> N10035 x 3 N30163 x 1	<i>3 barre cm 150</i> N10040 x 3 N30163 x 1			
VOLKSWAGEN - Crafter 04/06> PASSO Compact, Standard, Long, Extralong TETTO Normale, Alto	<i>4 barre cm 150</i> N10010 x 4 N30214 x 1	<i>4 barre cm 180</i> N10015 x 4 N30214 x 1			<i>4 barre cm 150</i> N10040 x 4 N30214 x 1	<i>4 barre cm 180</i> N10045 x 4 N30214 x 1			
VOLKSWAGEN - LT 01/00>12/06 TETTO H1	<i>3 barre cm 180</i> N10015 x 3 N30315 x 3	<i>4 barre cm 180</i> N10015 x 4 N30315 x 4			<i>3 barre cm 180</i> N10045 x 3 N30315 x 3	<i>4 barre cm 180</i> N10045 x 4 N30315 x 4			
VOLKSWAGEN - LT 01/00>12/06 TETTO H3	<i>3 barre cm 180</i> N10015 x 3 N30320 x 3	<i>4 barre cm 180</i> N10015 x 4 N30320 x 4			<i>3 barre cm 180</i> N10045 x 3 N30320 x 3	<i>4 barre cm 180</i> N10045 x 4 N30320 x 4			
VOLKSWAGEN - Transporter T5 04/03>03/15 PASSO Corto, Lungo TETTO Medio, Normale	<i>2 barre cm 150</i> N10010 x 2 N30172 x 1	<i>4 barre cm 150</i> N10010 x 4 N30172 x 2			<i>2 barre cm 150</i> N10040 x 2 N30172 x 1	<i>4 barre cm 150</i> N10040 x 4 N30172 x 2			
VOLKSWAGEN - Transporter T6 04/15> PASSO Corto, Lungo TETTO Medio, Normale	<i>2 barre cm 150</i> N10010 x 2 N30172 x 1	<i>4 barre cm 150</i> N10010 x 4 N30172 x 2			<i>2 barre cm 150</i> N10040 x 2 N30172 x 1	<i>4 barre cm 150</i> N10040 x 4 N30172 x 2			

Kargo Rack



KARGO RACK, CESTA PORTACARICO

Piano di carico con telaio a barre in acciaio verniciate a polvere.
Sponde laterali in alluminio anodizzato con tappi in plastica
Idonee per montaggio:

- A) **direttamente sui kit piedi specifici**
- B) **sui kit piedi grondina**
(necessita di 1 set morsetti N99978 ogni 2 piedi)
- C) **sulle barre Kargo acciaio**
(necessita di 1 set adattatori N99979 ogni barra)
- D) **sulle barre Kargo-Plus alluminio**
(necessita di 1 set adattatori N99979 ogni barra)

KARGO RACKS

Black powder coated steel frame with aluminium side profiles.
Suitable for installation on:

- A) **Foot kits directly**
- B) **Rain gutter feet**
(needed 1 clamp set N99978 each 2 feet)
- C) **Kargo steel bars**
(needed 1 adaptor set N99979 each bar)
- D) **Kargo-Plus aluminium bars**
(needed 1 adaptor set N99979 each bar)


Scatola / Box 1

Compact


N10102	L 140 x W 130 cm	114 cm	154 cm
N10105	L 170 x W 145 cm	129 cm	169 cm
N10107	L 190 x W 130 cm	114 cm	154 cm
N10108	L 190 x W 145 cm	129 cm	169 cm

Extended

N10124	L 280 x W 180 cm	164 cm	204 cm
N10127	L 340 x W 145 cm	129 cm	169 cm
N10128	L 340 x W 180 cm	164 cm	204 cm
N10131	L 380 x W 180 cm	164 cm	204 cm

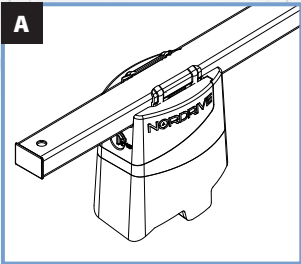


Montaggio diretto sui kit
attacchi specifici (fix point),
nessun adattatore richiesto
Direct mounting onto foot
kits, any adaptor required

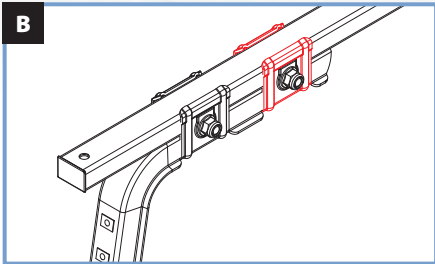

SET MORSETTI PER PIEDI GRONDINA
Per fissaggio cesta portacarichi
ai piedi grondina (1 set ogni 2 piedi)
CLAMP SET FOR RAINGUTTER FOOT
For installing roof rack onto raingutter foot
(1 set each 2 feet)

N99978

Sacchetto / Bag 50

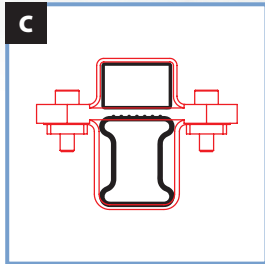

SET ADATTATORI PER BARRE
Per fissaggio cesta portacarichi alle barre Kargo / Kargo Plus
(1 set ogni barra)
ADAPTOR SET FOR BARS
For installing roof racks onto Kargo / Kargo Plus bars
(1 set each bar)

N99979

Scatola / Box 4 / 12



SCALETTA RIPIEGHEVOLE IN ACCIAIO

Scaletta mobile in acciaio verniciato, color grigio metallizzato, ripieghevole, dotata di appoggi in gomma antigraffio.

FOLDABLE STEEL LADDER

Movable steel ladder in metallic gray coating, foldable, with scratch-resistant rubber pads.

N11091 U-10 200 cm

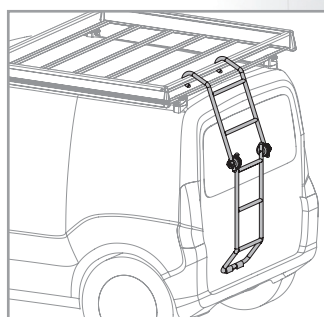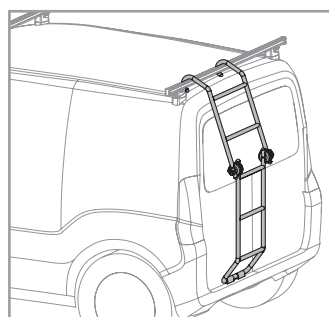

ACCIAIO
STEEL




SCALETTA IN ALLUMINIO

Scala in alluminio universale estraibile per ceste portabagagli. 4 punti di ancoraggio per un pratico montaggio sotto la cesta.

ALUMINIUM LADDER

Universal and removable aluminium ladder for roof rack basket. 4 anchorage points for easy mounting under the basket.

N11092 C-1 210 cm

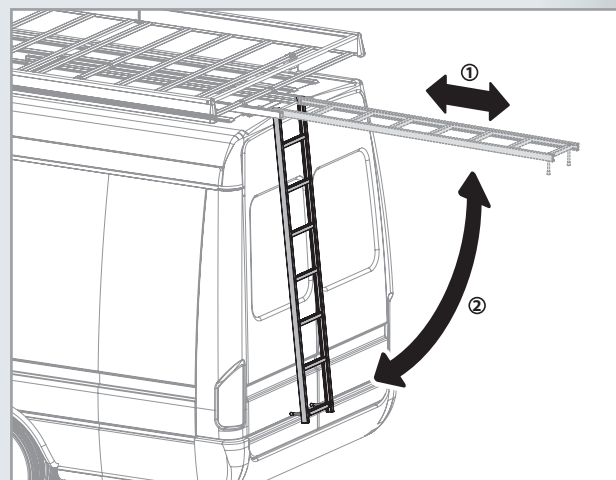

ALLUMINIO
ALUMINIUM





Special Auto Trading A/S
Bybjergvej, 13 - DK - 3060 Espergaerde
Denmark
Phone: +45 49176060 - Telefax: +45 49176070
E-mail: satex@satex.dk
www.satex.dk - www.nordrive.dk