

Installation Manual

RENAULT CAPTUR 5DR
REN-CAPT-5-A-18



COMPONENTS INCLUDED



FIXING CLIPS



CL-M05 x 4




CL-T01 x 1



Side Shade Installation

RENAULT CAPTUR 5DR
REN-CAPT-5-A-18

COMPONENTS NEEDED:

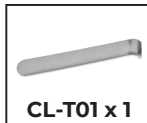

STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP
USING TOOL



STEP #2

POSITION THE SIDE SHADE




STEP #3

ATTACH SIDE SHADE BEHIND CLIPS



STEP #4

ENSURE SECURELY FITTED IN PLACE

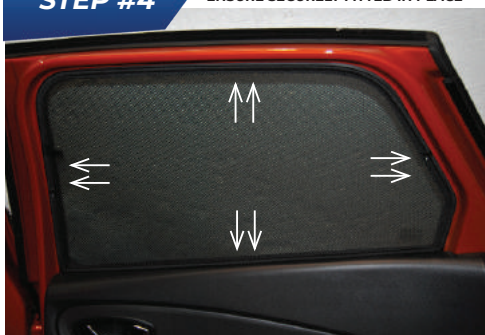

CAR
SHADES